 


A198 Massage Chair

Operation Instructions

SAVE THESE INSTRUCTIONS

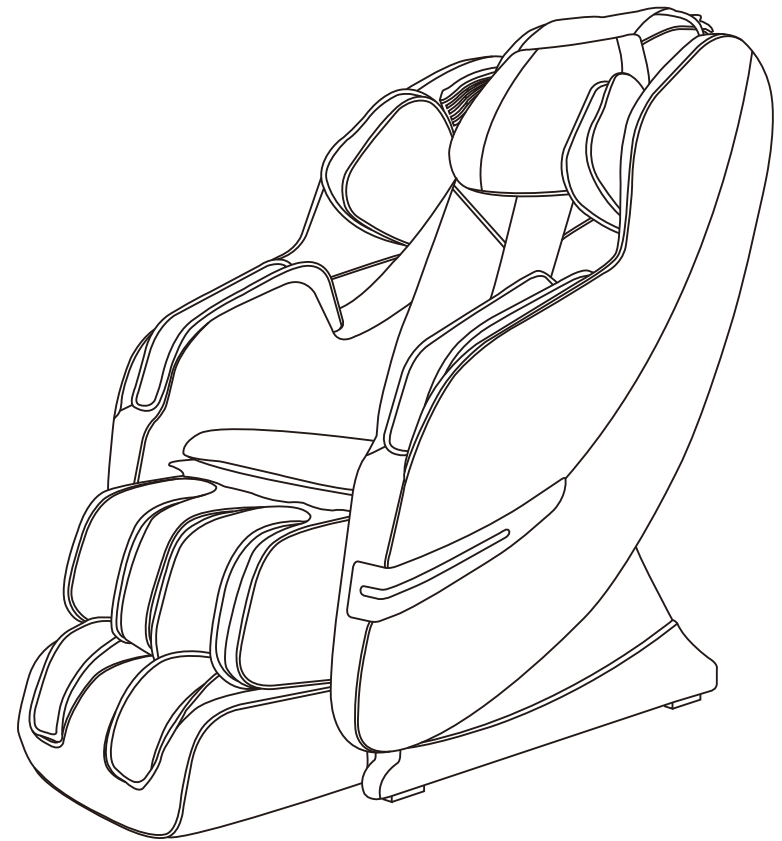

Thanks for purchasing this product. Please read this manual instruction carefully in order to know how to use this product correctly before operation. Please pay more attention to some important safety warning and keep this manual book properly for future use.

Note: Our company reserves the right to change and explain the design of the product. If there is some difference between the product function in market circulation and the description in the manual, it is a normal update of the product, and our company will not inform you otherwise. The specific product function and color shall prevail in kind.

CONTENTS

Safety and maintenance	02
Safety warning	04
Name and function of components	06
Function	07
Method of usage	08
Product specification	14

Safety and maintenance

1. Important Safety Warnings

- Do not allow children to touch any movable part of this product.
- Use the well-grounded power supply unit suitable for this product.
- Pull out the plug after use or before cleaning to avoid any physical injury or damage to the product.
- Operate this product as instructed in this manual.
- Do not use any parts or accessories which are not recommended.
- Do not use this product outdoors.
- Please read the Operation Instructions carefully before operation.
- Never use this product for any other purpose not listed herein.
- 20 minutes of usage each time is recommended.
- Do not use this product if the leather is broken or damaged.
- Do not use this product if the cover or leather is broken or damaged.
- Do not use this product if the radiator hole is covered or blocked.
- Do not drop anything into this product.
- Never fall asleep while using this product.
- Do not use this product if you are drunk or feel unwell.
- Do not use this product within one hour after a meal.
- Do not use this product with excessive force to avoid any injury.
- Do not carry any fragile, explosive, or combustible material in your pocket, such as a mobile phone and lighter when using the massage chair.

2. Operating Environment

- Do not use this product in a very moist environment such as the bathroom.
- Stop using this product immediately when the ambient temperature changes sharply.
- Do not use this product in any heavily-dusty or caustic environment.
- Do not use this product in a small space or a place without good ventilation.
- The normal room temperature ranges from 0 °C to 35 °C.
- Do not use this product in an excessively humid room such as a bathroom. Use it at a relative humidity between 20% and 80%.
- Do not use this product outdoors.
- Avoid direct sunlight.
- Keep this product away from any heat source such as a stove and air outlet of an air conditioner.
- Do not use this product during thunder or lightning weather.
- Do not use this product in dusty places.

3. The following populations should not use this product

- Patients with osteoporosis.
- Patients with heart disease or wearing electronic medical devices such as a pacemaker.
- People who have a fever.
- Pregnant women or women on their menstrual period.
- Patients who are injured or have a skin disease.
- When unsupervised, any children are under the age of 14 and those unconscious are not allowed to use this product.
- People who are told by their physicians to have rest or who feel unwell.
- People whose bodies are wet are forbidden to use this product.
- This product has a hot surface. Persons insensitive to heat must pay attention when using this product.

Safety and maintenance

4. Safety Precautions

- Check whether voltage is consistent with the specification of this product.
- Never insert or pull out the plug with a wet hand.
- Do not let water flow into this product to avoid electric shock or cause damage to this product.
- Do not pull the power cord when plugging or unplugging it. Rough handling is forbidden.
- Do not damage the wire or modify the circuit of this product.
- Do not clean live parts of this product with a wet cloth such as a power switch and plug.
- Be away from this product in case of power failure to avoid any injury if power is restored suddenly.
- Stop using this product at once while it works abnormal, and consult your local supplier.
- Stop using this product if you feel unwell, and consult your health care practitioner.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of this product by the personnel responsible for their safety. Children should be supervised to ensure that they do not play with this product.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified staff in order to avoid hazards.

5. Product Service and Maintenance

- This product should be maintained by the service center designated by the manufacturer only. No user should disassemble or maintain it without permission.
- Do not forget to turn off the main power switch after usage.
- Do not use this product if the power socket becomes loose.
- If this product will be left unused for a long period of time, it is necessary to roll up the power cord of this product and store this product in a dry and dust-free environment.
- Do not store this product at a high temperature or near open flame. Avoid prolonged exposure to direct sunshine.
- Please clean this product with dry cloth. Never use thinner, benzene or alcohol.
- The mechanical components of this product are specially designed and manufactured, so no special maintenance is needed.
- Do not use a sharp object to stab at this product.
- Do not roll or pull this product on any uneven ground. Instead, it should be lifted before moving.
- Please use this product intermittently. Do not keep it working continuously for a long period of time.

6. Solutions to Ordinary Malfunctions

- If the motor sounds during operation of this product, this is the normal operation sound.
- If the controller cannot work normally, check whether the plug and the power socket are connected reliably, and whether the power switch is turned on.
- If the rated working time is over, this product will automatically activate the power-off button; If this product keeps operating for a long period of time, the temperature protector will stop this product automatically. The product can be used again after half an hour.

 
7. Storage Conditions

- Storage room temperature: -5 °C to 35 °C.
- Relative humidity (RH) between 20% and 80%; free of corrosive gases, and a well-ventilated room.

Safety warning


⚠ Warning

When the footrest lifting, people should not apply pressure on the footrest to avoid the massage chair falling forward to damage the product or cause personal injuries.

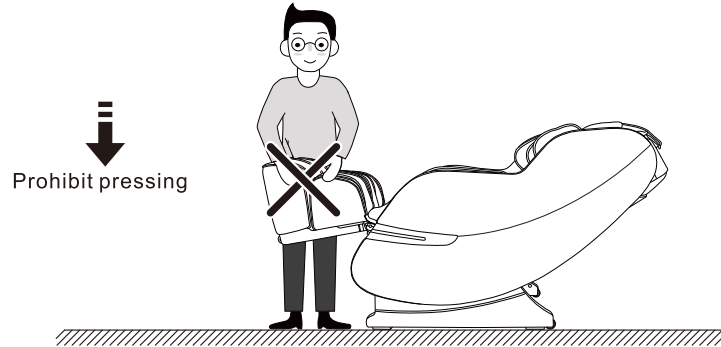

⚠ Warning

 
Before sitting on the massage chair, make sure that the massage hand stays in the seat cushion position to avoid discomfort to the buttocks during the body pressing down and damage to the massage hand.

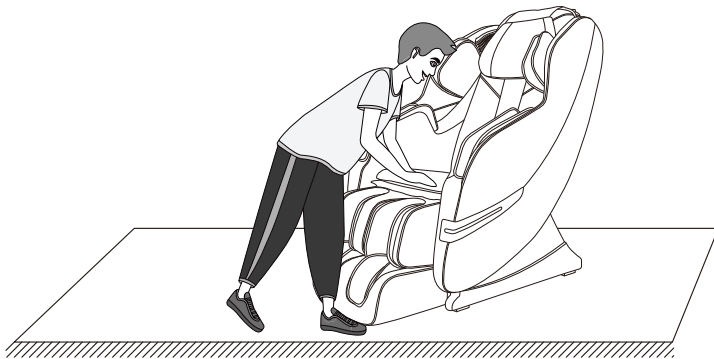

Safety warning


⚠ Warning

 Do not strive to pull out the control cable or power cord during standby or power-on state to avoid product damaged or electrocution accidents. Advise you unplug the controller cable and power cord and put away after you use the chair.

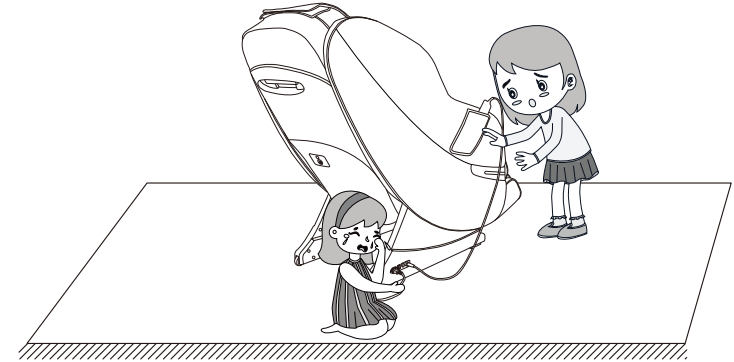


⚠ Warning

 
During massage, do not unplug the power cord or directly turn off the power switch behind the massage chair to avoid product damage or personal injury.

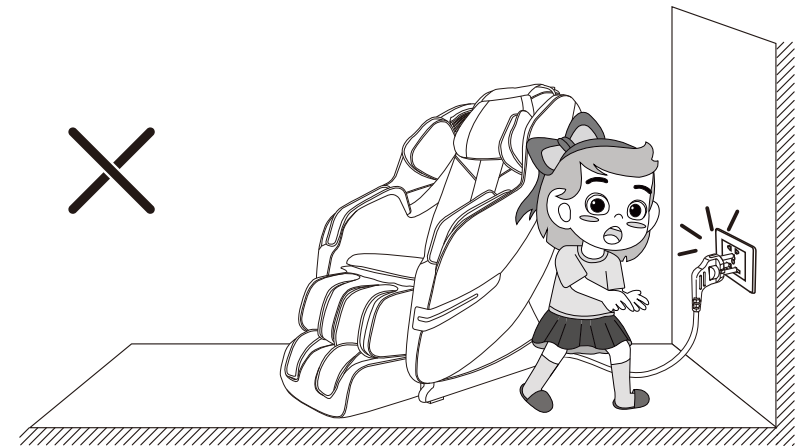


Name and function of components

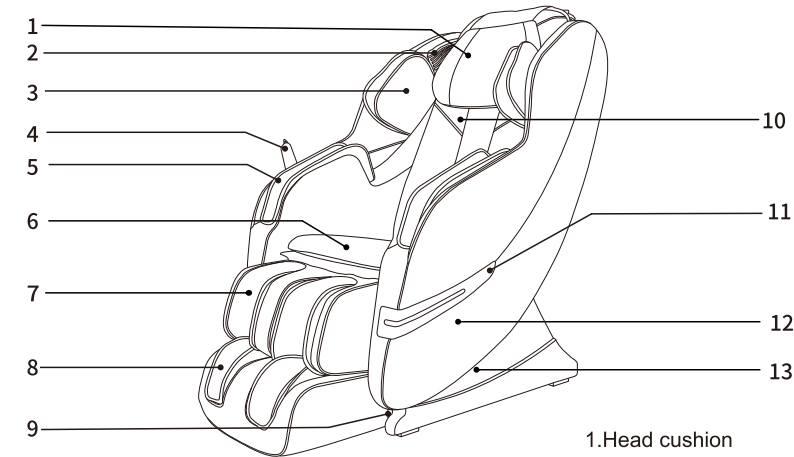 

 - 1.Head cushion
- 2.3D digital speaker
- 3.Shoulder air bag
- 4.Remote
- 5.Armrest air bag
- 6.Seat pad
- 7.Upper footrest
- 8.Lower footrest
- 9.Front cover
- 10.Backrest cushion assembly
- 11.Armrest decoration
- 12.Armrest
- 13.Side cover

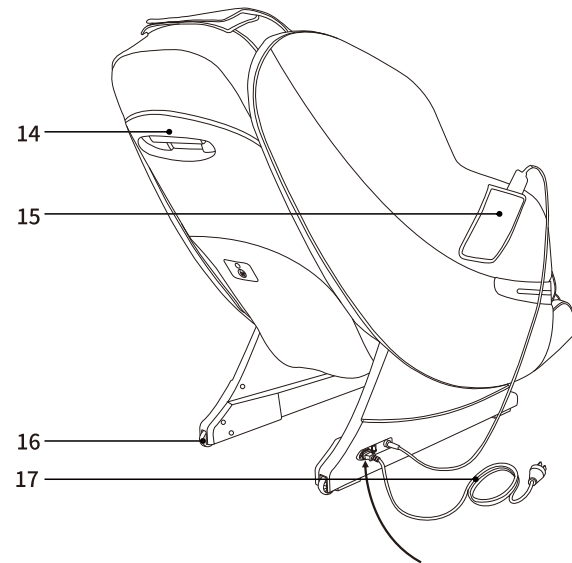

 - 14.Back cover
- 15.Remote pocket
- 16.Caster
- 17.Power cord and plug



18

19

 
20

Function

- 1.This product is designed with mechanism that can be up and down, four-wheel drive, and Quiet design.
- 2.Four techniques: Shiatsu, kneading,tapping, kneading&tapping.
- 3.Three automatic programs: Comfort, Relax, Exercise recovery.
- 4.Upper half of the manual(Three massage position for selection: Spot, Partial, Full body); each massage techniques can be adjusted in five speeds; When in Spot and Partial state, the mechanism can go up and down;When in tapping ,shiatsu massage techniques, the width of the massage roller can be selected in three levels.
- 5.Airbag massage function: massage the arms, legs, and feet with air pressure, also can be adjusted in three intensity.
- 6.Back heating function.
- 7.Linkage lifting function between Backrest and footrest.
- 8.Footrest adopts stepless extension to meet the need of different people's use.
- 9.The music player system is available.3D digital systems are built into left and right upper arms.The Bluetooth function of intelligent device can be used to connect wirelessly and play music.

Method of usage

Note: The specific display is subject to the actual product!

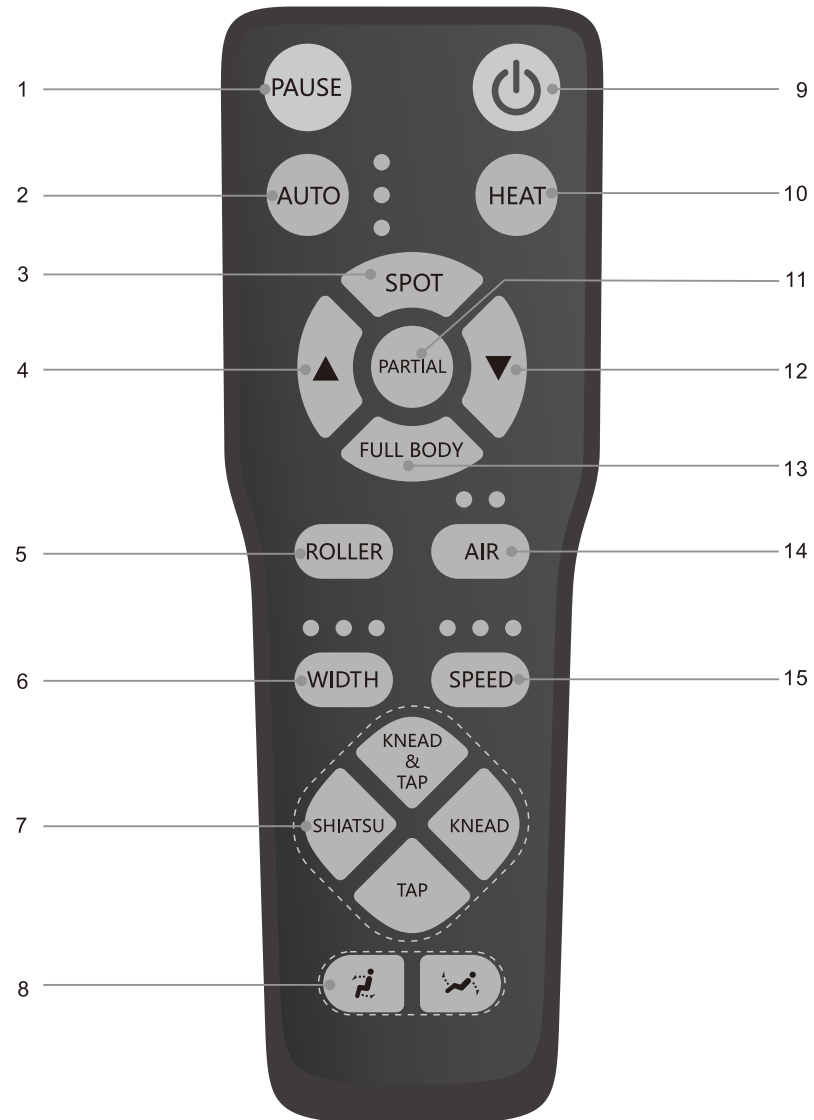


Method of usage

1. Pause/run button
Pause or run all massage functions.
2. Automatic button
Please refer to page 9 of this manual.
3. Spot massage button
Please refer to page 10 of this manual.
4. Shoulder position up button
Manually adjust the shoulder position upwards.
5. Foot roller button
Please refer to page 10 of this manual.
6. Width adjustment button
Adjustable in 3 modes: wide, medium and narrow.
7. Technique button
Please refer to page 10 of this manual.
8. Linkage lift adjustment button
Please refer to page 9 of this manual.
9. Switch power button
Turn on or off all massage functions.
10. Heating button
Turn on or off the heating massage function.
11. Partial massage button
Please refer to page 10 of this manual.
12. Shoulder position down button
Manually adjust the shoulder position down.
13. Full body massage button
Please refer to page 10 of this manual.
14. Air pressure button
Adjust the strength/weakness of the pressure.
15. Speed adjustment button
Adjust three speeds: slow, medium and fast.

Method of usage

 1. Turn on the power of the whole machine

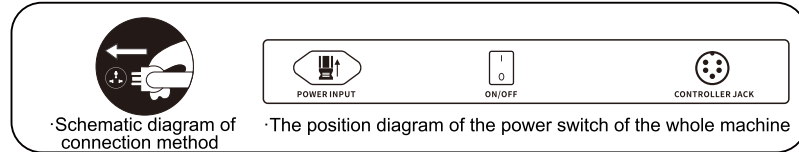

2. Adjust the angle of the backrest and the footrest

· Adjust according to the required posture (please do not adjust during the massage).

Linkage lifting adjustment:

Button	Description
	Press and hold this button, the backrest rises slowly, the footrest slowly descends, release it to stop. If you sit up to the top, it will stop ascending, and make a short beep with a "di...di...".
	Press and hold this button, the backrest will slowly descend, the footrest will rise slowly, release it to stop. If you lie down to the bottom, you will stop descending, and a short beep will sound.

3. Start the massage.

· Press the red switch button to start the massage.

· The comfort mode is entered by default, and other massage modes can also be selected for massage.

A).Automatic massage:

Name	Button	Massage program	Description	Display
Automatic massage		Comfort	The most comfortable massage experience.	● ○ ○
		Relax	Relax your body.	○ ● ○
		Exercise recovery	Suitable for all-round relaxation after exercise.	○ ○ ●

B).Lower body air pressure, roller massage:

Name	Button	Description	Display
Air pressure		Three levels of pressure can be adjusted	●○ ○● ●● weak secondary strong
Foot roller		Press this button to turn on or off the foot roller massage	

Method of usage

C),Manual massage for the upper body:

Technique selection:

Name	Button	Massage content	Adjustment of massage roller
Technique		Knead	Speed.
		Tap	Speed, width
		Shiatsu	Speed, width
		Knead&tap	Speed

Speed, width adjustment


Function	Button	Description	Display
Speed		3 speeds can be adjusted	●○○ ○●○ ○○● Slow Medium Fast
Width adjustment		3 levels of width adjustable	●○○ ○●○ ○○● Narrow Medium Wide

Position and back stretch adjustment:

Function	Button	Description	
Back stretch		Fixed position (fixed point) massage	
		Small range (local) round-trip massage	
		Full body (whole course) round-trip massage	
Position adjustment		Massage position adjustment (in spot and partial mode, the massage position can be adjusted)	Manipulator up
			Manipulator down

Method of usage


Other Manual function:

Function	Button	Description
Heating		Heating function on the back , there will be warm after 3 minutes of opening.

4. Turn off the power and end the massage.

- ① During the massage process, press the red button or the massage time is over, then all massage functions will be turned off immediately, the massage mechanism will reset, and the backrest and footrest will automatically reset.
- ② After the reset is completed, cut off the power supply of the whole machine


Attached drawings (Schematic diagram of power cut off of the whole machine)

 

The position diagram of the power switch of the whole machine · Schematic diagram cut off method

5. Footrest stepless extension


 
Footrest adopts stepless extension to meet the need of different people's use.

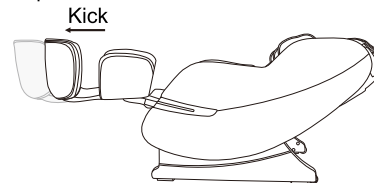


Footrest stepless extension

6. Disassembly and use of head cushion and back cushion

  The use of a head cushion can reduce the intensity of the neck and shoulder kneading massage. You can decide whether to use a pillow pad according to needs (head cushion is recommended). The backrest cushion and the backrest are connected by a zipper (1) The headcushion and the backrest cushion are connected by a hook-loop fastener (2).

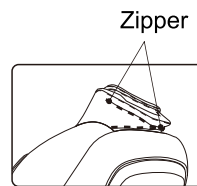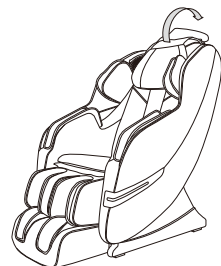

 (1)

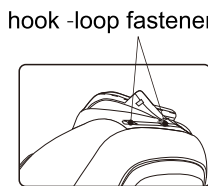


(2)

Method of usage

7. Floor protection

 Long-term heavy pressure on the massage chair may cause scratches on the floor. This can be avoided by placing a carpet or other cushioning medium under the chair.

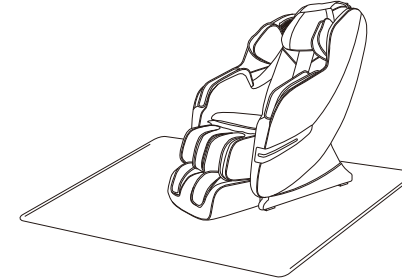


Notice

Do not use the caster to move the machine on uneven ground or places with small space. If you want to move, you must lift it by two or more people. When lifting, use the front seal of the footrest and the groove of the back cover as a landing point (do not lift the support directly).

9. Move method

 After confirming that all the cables are far away from the ground, pull the backrest back to a certain degree (when the center of gravity falls on the pulley), then you can push the chair back and forth with your hand, and then gently support the chair back to the normal position.

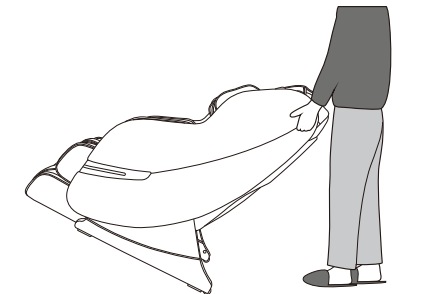

Notice

When moving, be sure to turn off the power switch before unplugging the power cord and the connection cord of the remote .

Product specification

Model: SL-A198

Name: Massage Chair

Rated voltage: 110-120V~ 60Hz

220-240V~ 50/60Hz

Rated power input: 100W

Rated time: 20Min

Safety structure: Class I

Material introduction: PVC, PA, steel parts and electric & electron parts

MATERIAL	PU	LEATHER	CLOTH	WOOD