




**SAVE THESE INSTRUCTIONS**

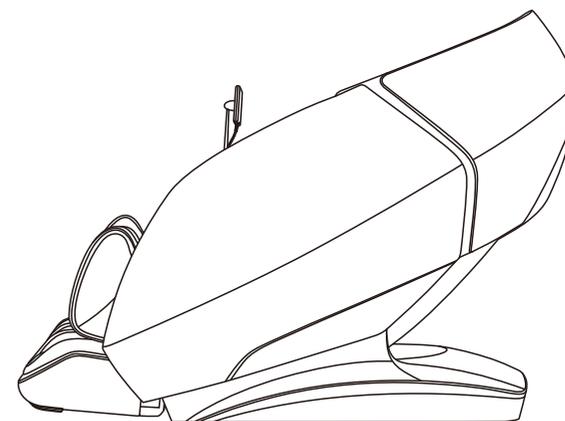

**A860-10**  
**MASSAGE CHAIR**  
— Operation Instructions —

Thanks for purchasing this product. Please read this manual instruction carefully in order to know how to use this product correctly before operation. Please pay more attention to some important safety warning and keep this manual book properly for future use.

Note: Our company reserves the right to change and explain the design of the product. If there is some difference between the product function in market circulation and the description in the manual, it is a normal update of the product, and our company will not inform you otherwise. The specific product function and color shall prevail in kind.

## CONTENTS

### Before use

---

Safety precautions	02-05
Installation parts	06-07
Place massage chair	08-09
Before use	10-11
Product structure	12-18

### Usage method

---

Operation Instructions	19-60
End massage	60

### Maintain

---

Cleaning and Maintenance	61
--------------------------	----

### Important

---

Troubleshooting	62
Product Specifications	63

## Safety Precautions (Must be observed)

- Please read all relevant instructions carefully before use.
- The notes marked here will help you to use the product safely and correctly.
- In order to clearly indicate the extent of harm and damage, precautions are divided into **"Warning"** and **"Caution"** that may be caused by incorrect use. Both of them are important for safety and must be followed.

 <b>Warning</b>	Indicates that serious injury or death may result from improper use.
 <b>Caution</b>	Indicates that misuse may cause minor injury or property damage.

- Please pay attention to the symbol before each safety item.

 <b>Forbidden</b>	Absolute prohibition
--	----------------------

### The following populations should not use this product

 <b>Forbidden</b>	<ul style="list-style-type: none"> <li>■ The device is not intended for use by persons (including children) with physical disabilities, sensory or neurological impairments or who lack experience and common sense, unless they are supervised and instructed in the use of the device by those responsible for their safety. Children must be supervised to ensure they do not use tools for play.</li> <li>■ Patients with osteoporosis.</li> <li>■ Patients with severe heart disease and wearing implantable medical devices such as pacemakers and defibrillators that are susceptible to electromagnetic waves.</li> <li>■ People who have a fever (above 38 degrees ).</li> <li>■ Pregnant women or shortly after childbirth and during their menstruation period.</li> <li>■ People who follow medical advice and are prohibited from receiving massage due to thrombosis, aneurysm, severe varicose veins, or other circulatory diseases. Within two weeks after the appearance of blood clots, it is strictly prohibited to massage any form of body parts that have blood clots.</li> <li>■ Patients who are injured or have a skin disease.</li> <li>■ When unsupervised, any children are under the age of 14 and those unconscious are not allowed to use this product.</li> <li>■ People who require rest or feel unwell as instructed by a doctor.</li> <li>■ People with spinal abnormalities or scoliosis are prohibited from receiving this product due to medical advice due to other diseases.</li> <li>■ People whose bodies are wet are forbidden to use this product.</li> <li>■ This product has a hot surface. Persons insensitive to heat must pay attention when using this product.</li> </ul>
---	--

## Safety Precautions (Must be observed)

<b>Important safety warnings</b>	
 <b>Warnings</b>	<ul style="list-style-type: none"> <li>■ Keep children away from the movable parts of this product.</li> <li>■ Use the well-grounded power supply unit suitable for this product.</li> <li>■ Pull out the plug after use or before cleaning to avoid any damage to physical injury or the product.</li> <li>■ Operate this product as instructed in this manual.</li> <li>■ Do not use any parts or accessories which are not recommended.</li> <li>■ Do not use this product outdoors.</li> <li>■ Do not use near open flames such as stoves, and do not smoke while using.</li> <li>■ Do not use heating equipment such as electric blankets on this product.</li> <li>■ Do not sit on the back of the chair, leg massagers, shoulders, armrests, or stand on the seat.</li> <li>■ Please read the Operation Instructions carefully before operation.</li> <li>■ Never use this product for any other purpose not listed in the manual .</li> <li>■ 20 minutes of usage each time is recommended.</li> <li>■ Do not use this product if the cover or leather is broken or damaged.</li> <li>■ Do not drop anything into this product.</li> <li>■ Never fall asleep while using this product.</li> <li>■ Do not use this product if you are drunk or feel unwell.</li> <li>■ Do not use this product within one hour after a meal.</li> <li>■ Do not use this product with excessive force to avoid any injury.</li> <li>■ Do not use for purposes other than massage.</li> <li>■ If the supply cord is damaged, to avoid danger, it must be replaced by a professional from the manufacturer, its maintenance department or similar department</li> </ul>

<b>Operating environment</b>	
 <b>Caution</b>	<ul style="list-style-type: none"> <li>■ Do not use this product in a very moist environment such as the bathroom.</li> <li>■ Stop using this product immediately when the ambient temperature changes sharply.</li> <li>■ Do not use this product in any heavily-dusty or caustic environment.</li> <li>■ Do not use this product in a small space or a place without good ventilation.</li> </ul>

## Safety Precautions (Must be observed)

### Storage conditions



Caution

- Storage room temperature: 5 °C to 40 °C.
- Relative humidity (RH) between 20% and 80%; free of corrosive gases, and a well-ventilated room.

### Product service and maintenance



Caution

- This product should be maintained by the service center designated by the manufacturer only. No user should disassemble or maintain it without permission.
- Do not forget to turn off the main power switch after usage.
- Do not use this product if the power socket becomes loose.
- If this product will be left unused for a long period of time, it is necessary to roll up the power cord of this product and store this product in a dry and dust-free environment.
- Do not store this product at a high temperature or near open flame. Avoid prolonged exposure to direct sunshine.
- Please clean this product with dry cloth. Never use thinner, benzene or alcohol.
- The mechanical components of this product are specially designed and manufactured, so no special maintenance is needed.
- Do not use a sharp object to stab at this product.
- Do not roll or pull this product on any uneven ground. Instead, it should be lifted before moving.
- Please use this product intermittently. Do not keep it working continuously for a long period of time.

### Solutions to ordinary malfunctions



Caution

- If the motor sounds during operation of this product, this is the normal operation sound.
- If the controller cannot work normally, check whether the plug and the power socket are connected reliably, and whether the power switch is turned on.
- If the rated working time is over, this product will automatically activate the power-off button; If this product keeps operating for a long period of time, the temperature protector will stop this product automatically. The product can be used again after half an hour.

## Safety Precautions (Must be observed)

### Safety precautions





Caution

- Check whether voltage is consistent with the specification of this product.
- Never insert or pull out the plug with a wet hand.
- Do not let water flow into this product to avoid electric shock or cause damage to this product.
- Do not pull the power cord when plugging or unplugging it. Rough handling is forbidden.
- Do not damage the wire or modify the circuit of this product.
- Do not clean live parts of this product with a wet cloth such as a power switch and plug.
- Be away from this product in case of power failure to avoid any injury if power is restored suddenly.
- Stop using this product at once while it works abnormal, and consult your local supplier.
- Stop using this product if you feel unwell, and consult your health care practitioner.



## Installation parts

### Armrest installation instructions



1. After powering on, use the Remote control to lie down the backrest to the end.
2. Insert the harness assembly and air pipe on the steel frame assembly into the armrest plug and air pipe joint respectively, and dock them firmly (Figure 1)

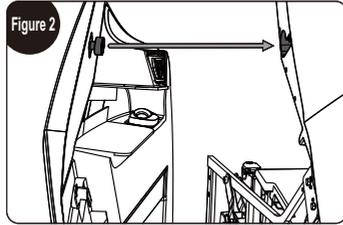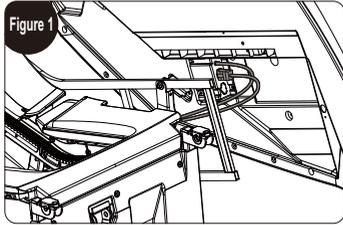

3. First, lift and tilt the front of the armrest, then place the rollers at the rear end of the armrest into the corresponding slots on the side of the capsule (Figure 2), push the armrest towards the upper rear end, and push the roller to the limit position of the slot. (Figure 3)

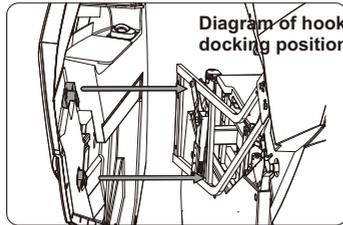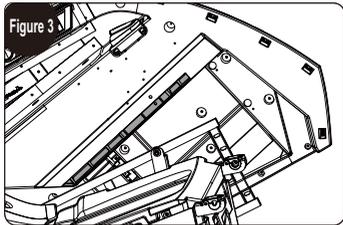



4. Press the front end of the armrest down, and hang the hook position on the armrest to the pipe fittings of the steel frame assembly. The front side screw position of the armrest is aligned with the steel frame assembly and exposed, which means it is assembled in place. (Figure 4) Finally, lock with 2 M5 screws. (Figure 5)

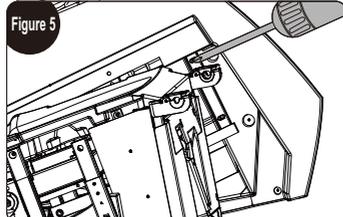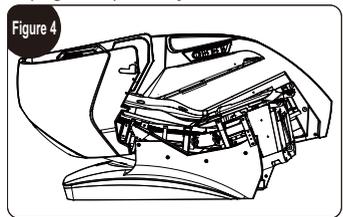


## Installation parts

### Calf installation instructions

1. Insert the wire of the calf and the air pipe into the sockets on the front end of the steel frame assembly (Figure 1).
2. After the wire docking is completed, open the calf fixing covers on both sides of the steel frame assembly (Figure 2).

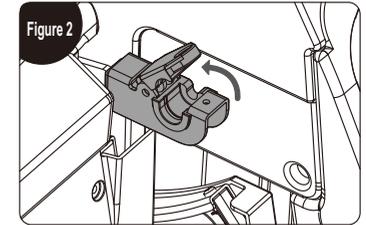
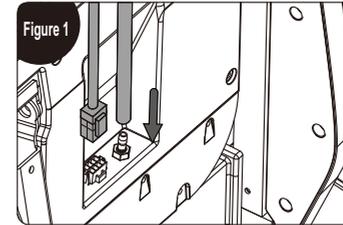


3. Lift the calf into the notch, close the fixing covers, and secure it in place with 2 pieces M5 screws (Figure 3).

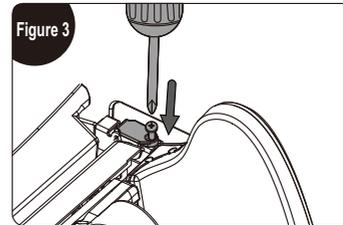


### Touchscreen hand control bracket installation instructions

1. Align the bracket with the hole at the front of the armrest (right) and fasten it with M5 screws (Figure 1).
2. Align the bracket decorative piece with the bracket and press down along the bracket rods all the way down (Figure 2).

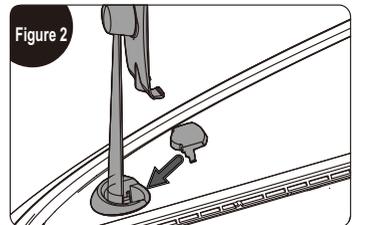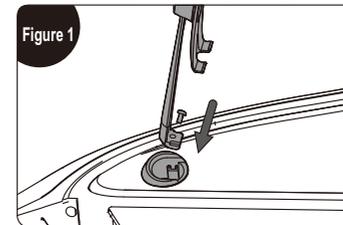

3. After the entire bracket is installed, shake the bracket lightly to confirm whether it is firmly installed; the bracket installation is complete (Figure 3).

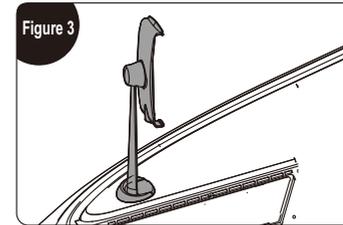


## Place massage chair

### Installation placement

**Make sure there is enough space for the massage chair can be tilted at least 10 cm.**



Do not expose the massage chair directly to high temperature environment due to sunlight (such as: in front of heating equipment), and place it to where can avoid high temperature and direct sunlight. It is recommended to lay a soft cushion for long-term use in a designated location. When laying the cushion, the size of the cushion should be enough to cover Keep the range where the machine touches the floor and the range where your feet touch the floor.

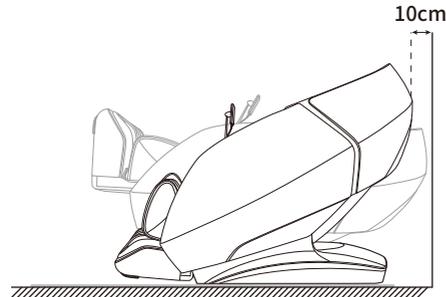


### Product lift instruction

**Require team work to lift and move the chair to avoid injury.**



1. Please lift the massage chair to move it on vulnerable ground such as wooden floor.  
2. When moving on a similar wooden floor, it is recommended to lift it. Avoid damage to the casters. When the floor is lifted and moved to the designated position, be careful to keep your hands out of the way to avoid injury, and be careful of your feet being crushed. Do not let go of the unit until the unit is completely flat, the floor may be damaged, therefore, it is recommended to place mats, etc. on the floor.

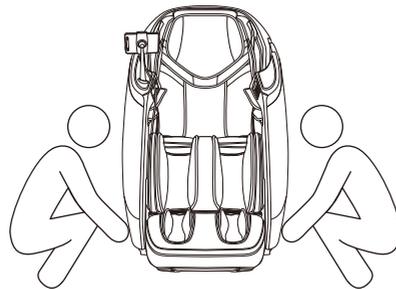

## Place massage chair


### Move method

**Use the rear casters to move the massage chair. Move the chair by tilting it down and backward about 45° as shown in the diagram.**




**NOTE: Excessive force to title will cause the chair to tip over completely and product damage.**

1. Before moving, please shut down the machine properly to reset the whole machine, and then cut off the power.
2. Please keep the chair vacant when moving. (People, pets or clutter will not be able to stay on the chair.)
3. When moving, do not cross a drop barrier higher than 2mm or a gap greater than 5mm.
4. When using casters to move this product, single continuous movement is not supported; if the distance exceeds 50 meters, please make this product move slowly and evenly.

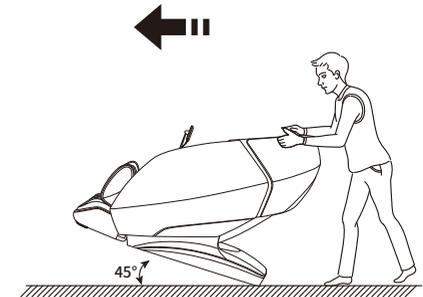

### How to disassemble and use headrest cushion and backrest cushion


Using a headrest cushion can reduce the intensity of kneading massage on the neck and shoulders, and you can decide whether to use a headrest cushion according to your needs (recommended to use a headrest cushion). The backrest cushion and the backrest are connected by a zipper (1), and the headrest cushion and the backrest cushion are connected by a zipper (2).

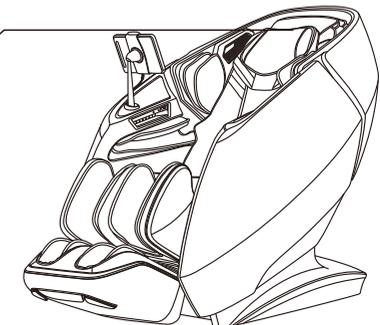

## Before use

### Check around

Make sure that there are no people, pets and other objects around the unit.

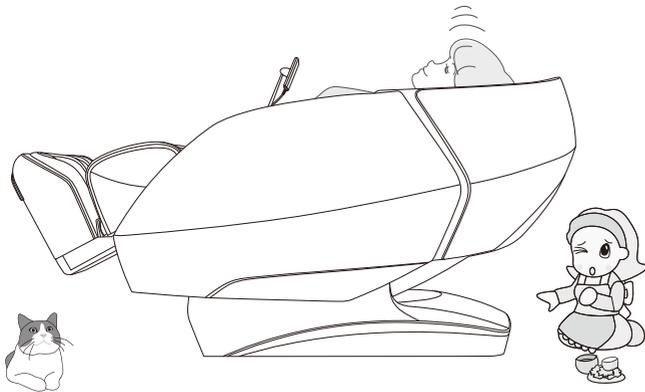


### Make sure there are no foreign objects in the gaps of the machine

Before massaging, make sure that no foreign objects are caught in the legs, feet, etc.


Under no circumstances allow hands, feet, and head to penetrate into the area between the lower leg mechanism and main body, or the area between the armrest and the capsule.

Under no circumstances should hands, feet, or head sink under the fabric or leather covering of the massage area.

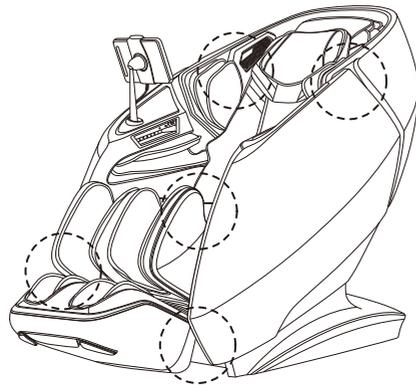


## Before use


### Turn on the power

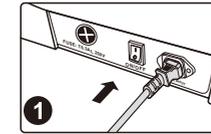

1 Plug in power cord

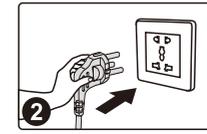

2 Schematic diagram of power on

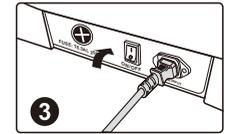


3 Turn on the power switch ("I" position)



- Please check the power cord and plug for damage before use.
- Please supply power to this product in accordance with the working power requirements of this product's calibration.
- It is strictly forbidden to use a power supply other than the nominal power supply of this product.
- It is strictly forbidden to connect various power conversion devices without authorization to supply power to this product.

## Product structure


### Description of Components

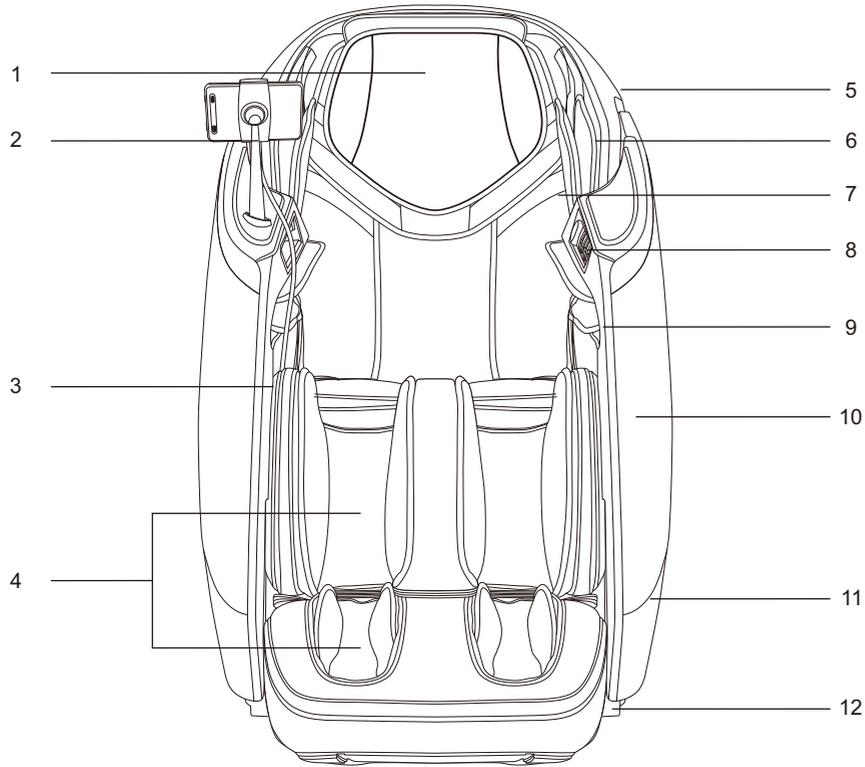

- |                           |                          |
|---------------------------|--------------------------|
| 1. Head cushion           | 7. Shawl back cushion    |
| 2. Manual controller      | 8. Armrest shortcut keys |
| 3. Arm air pressure       | 9. Health detection      |
| 4. Leg massage components | 10. Armrest              |
| 5. Space capsule          | 11. Atmosphere lamp      |
| 6. Shoulder air pressure  | 12. Side cover           |

## Product structure

### Schematic view of functional distribution

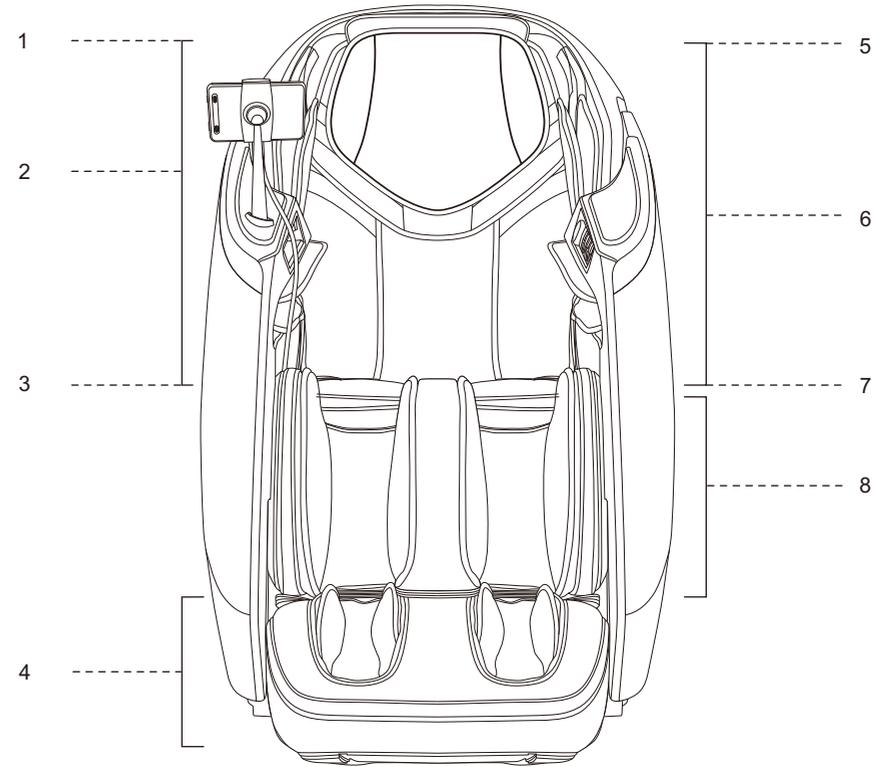

- |             |   |   |
|-------------|---|---|
| 1. Shoulder | <ul style="list-style-type: none"> <li>• Airbag massage</li> <li>• Voice control function</li> <li>• Built-in voice control microphone</li> </ul>   | <ul style="list-style-type: none"> <li>• Roller massage</li> <li>• Electrically adjustable foot telescopic</li> <li>• Automatic leg length detection</li> </ul> |
| 2. Arm      | <ul style="list-style-type: none"> <li>• Air bag massage</li> <li>• Manual bracket</li> <li>• Mobile phone placement slot</li> <li>• USB charging port</li> <li>• Wireless charger</li> </ul> | 5. 3D digital audio on both sides of the head   |
| 3. Hand     | <ul style="list-style-type: none"> <li>• Air bag massage</li> </ul>   | <ul style="list-style-type: none"> <li>• Music player</li> </ul>  |
| 4. Sole     | <ul style="list-style-type: none"> <li>• Airbag massage</li> </ul>  | 6. Head and neck to sitting area  |
|             |   | <ul style="list-style-type: none"> <li>• Double movement massage</li> </ul>   |
|             |   | 7. Shoulder, Shawl, Back & Waist, Abdomen   |
|             |   | <ul style="list-style-type: none"> <li>• Heating function</li> </ul>  |
|             |   | 8. Leg  |
|             |   | <ul style="list-style-type: none"> <li>• Airbag massage</li> <li>• Kneading massage</li> </ul>  |


#### ★Other configuration functions

- |   |   |
|---|---|
| <ul style="list-style-type: none"> <li>• Bluetooth APP function</li> <li>• WIFI function</li> </ul> | <ul style="list-style-type: none"> <li>• Smart device Bluetooth APP operating system</li> </ul> |
|---|---|

## Product structure


### How to use the shawl

It features a unique shawl component, with innovative heating functions on the shoulder, back, waist and abdomen. Users can place the shawl at different massage positions according to massage requirements.

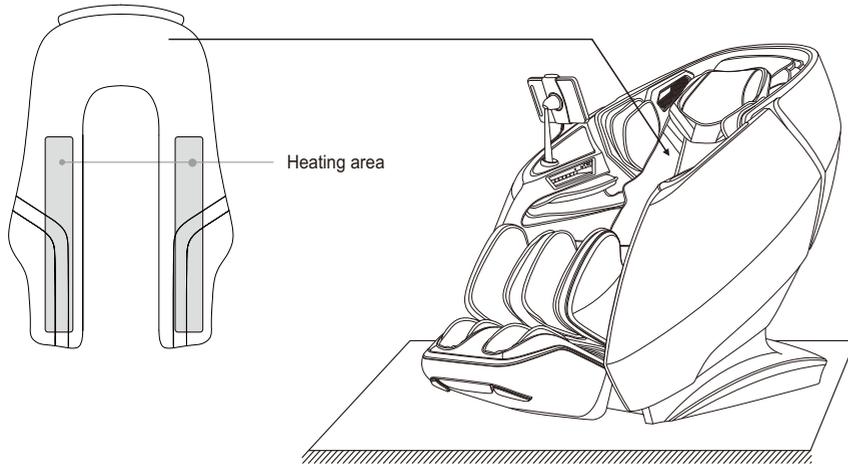

#### Schematic diagram of use on back and waist


When the shawl component is placed on the back and waist position, the shawl built-in heating, dredge the back meridians, promote blood circulation and warm the kidney, relieve low back pain, back cold stiffness, pain and other conditions.

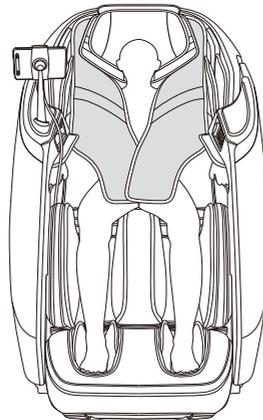

## Product structure

#### Schematic diagram of use on shoulder and abdomen

When the shawl component is placed at the shoulder position (front/rear), it will heat the acupoints such as Bingfeng, Tianzong, Yunmen and Qihu around the shoulder and clavicle through the shawl built-in heating; it can also be placed on the abdomen to heat the abdomen through the shawl built-in heating.


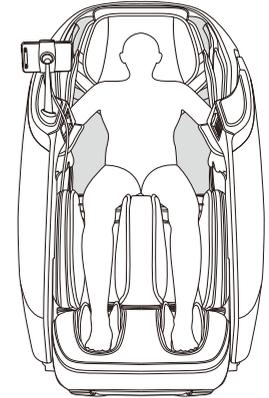


#### Use demonstration of the shawl on the back




**Caution**

1. Correct placement and use: When the shawl is used on the back (or the massage chair is not turned on), please place the shawl on both sides of the backrest and put the lower magnet and the backrest cushion lumbar position of the magnet corresponding suction well; if you do not need to use the shawl function, level the shawl and lift back behind the massage chair.
2. Wrong placement and use: When the shawl is used on the back (or the massage chair is not turned on), do not bring the shawl together in the middle manipulator massage area, which may lead to functional failure, product failure and other serious faults. At the same time, do not fold, twist, cross the shawl, and place and use the shawl on your back.

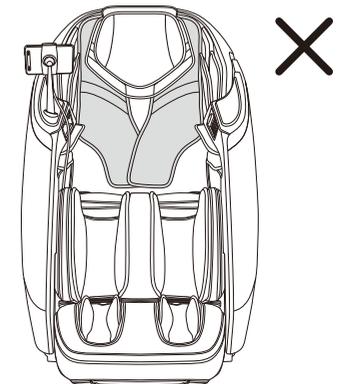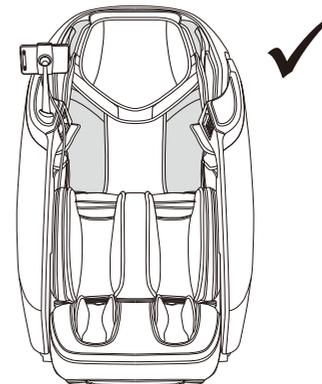


## Product structure

### Remote controller keys instruction

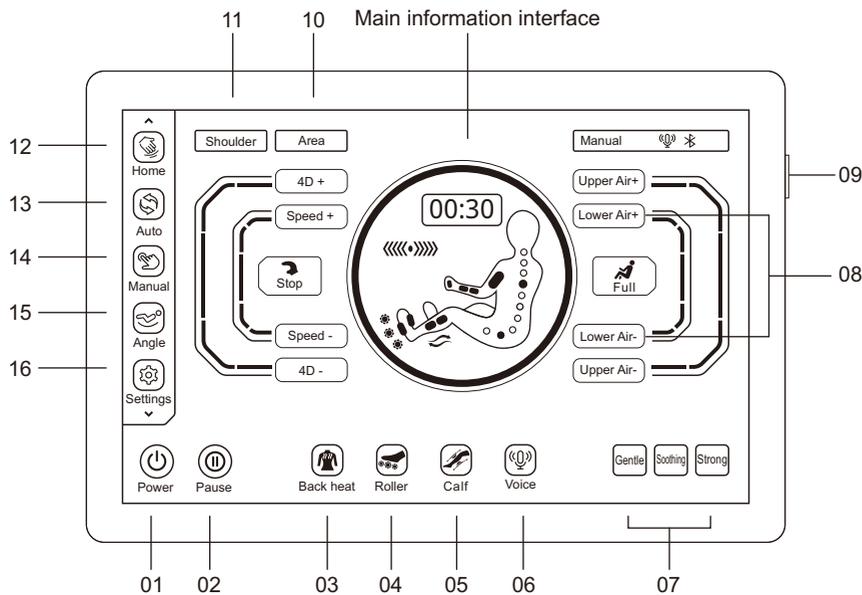

- 01.On/off touch key: Enable or disable the Massage Chair function.
- 02.Pause key: Pause the massage or exit from pause massage
- 03.Back heating key: Enable or disable the Back Heating function.
- 04.Sole roller key: Enable or disable the Sole Roller function.
- 05.Calf kneading key: Enable or disable the Calf Kneading function.
- 06.Voice control key: Wake up voice assistant.
- 07.Intensity selection key: Select one from different automatic massage intensities.
- 08.Lower body air pressure intensity key: Adjust the air pressure.
- 09.Button ON/OFF key: Turn on or off the massage chair.
- 10.Massage area key: The function of selecting massage position.
- 11.Shoulder position adjustment key: Regulate shoulder position and confirm massage criterion
- 12.Current status key: Enter to view current massage chair status.
- 13.Auto key: Enter the automatic massage program selection function.
- 14.Manual key: Enter the manual setting massage function.
- 15.Angle button: Enter the angle adjustment interface to select the sitting posture angle.
- 16.Settings key: Enter the setting menu interface.


## Product structure

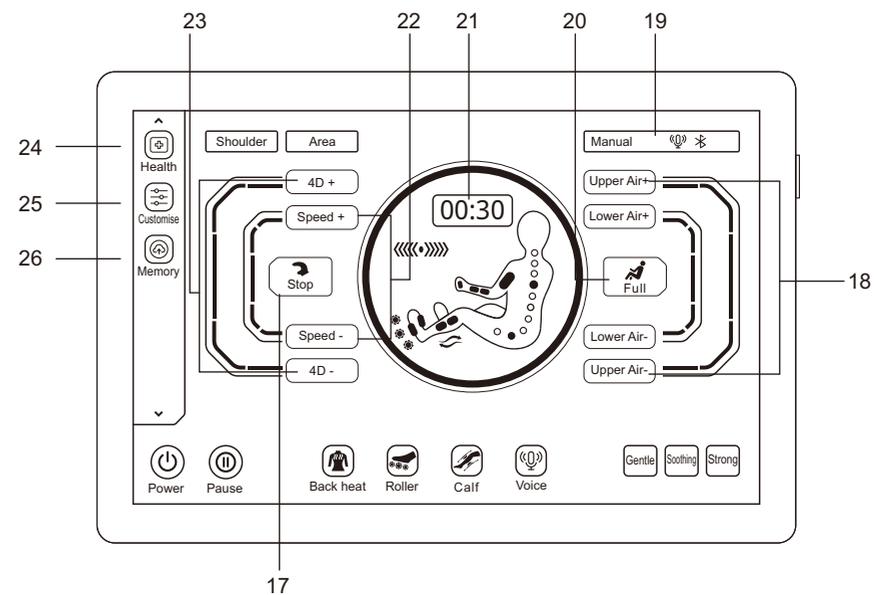

- 17.Massage technique selection key: Select the massage technique.
- 18.Upper body air pressure intensity key: Adjust the air pressure.
- 19.Status display bar key: Display the massage program status information.
- 20.Air massage selection key: Select air position.
- 21.Time adjustment menu key: Adjust the massage time.
- 22.Massage speed key: Adjust the massage speed.
- 23.4D intensity key: Adjust 4D intensity.
- 24.Health detection key: Enter the health detection interface.
- 25.Custom key: Enter the custom interface.
- 26.Storage key: Enter the storage interface

## Product structure

### Description of armrest shortcut keys

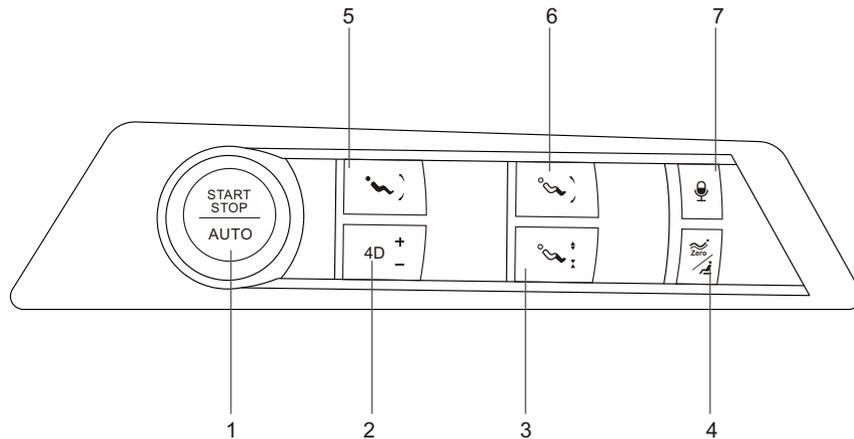


1. On/off Auto
  - Long press start/off message, short press switch different autot modes.
2. 4D+ key
  - Press this key to increase the 4D intensity, up to 5 levels.
  - Lift this key up, the 4D intensity is reduced, and the lowest is 1 level.
3. Calf retractable key
  - Press and hold the button to extend the foot slowly, release it to stop the foot extension.
  - Lift the button to shorten the foot slowly, release it to stop the foot shortening.
4. Zero gravity key
  - Short press this key to automatically adjust the zero gravity angle, two levels can be adjusted. Press and hold for 1 second, the angle returns to the initial angle, the calf is lowered to the lowest position, and the backrest is raised to the highest position.
5. Linkage up and down key
  - Press and hold this button, the backrest rises slowly, and the leg rest slowly descends, release it to stop the backrest rising and the leg rest descending, and the leg rest will automatically detect the foot length.
  - Lift the button and the backrest will slowly descend, and the leg rest will slowly rise. Release it to stop the backrest descending and the leg rest ascending. The leg rest will automatically detect the foot length.
6. Leg rest up and down key
  - Press and hold the button to lower the leg rest slowly, release it to stop the lowering, the leg rest will automatically detect the foot length.
  - Lift the button to raise the leg rest slowly, release it to stop the leg rest rising, the leg rest will automatically detect the foot length.
7. Voice control key
  - Press to turn on or off the voice assistant function, and short press to wake up the voice assistant.

## Operation Instructions


### I. Start massage

1. Press the remote controller side button on/off key or long press the armrest on/off key
2. After the system is started, select the massage intensity by clicking on any one of the Gentle , Comfort or Strong keys on the remote controller to turn on the massage chair and enter the lying state. If it is not selected within 5 minutes, the massage chair will turn off automatically.

Button On/Off key Press this key to turn the equipment on

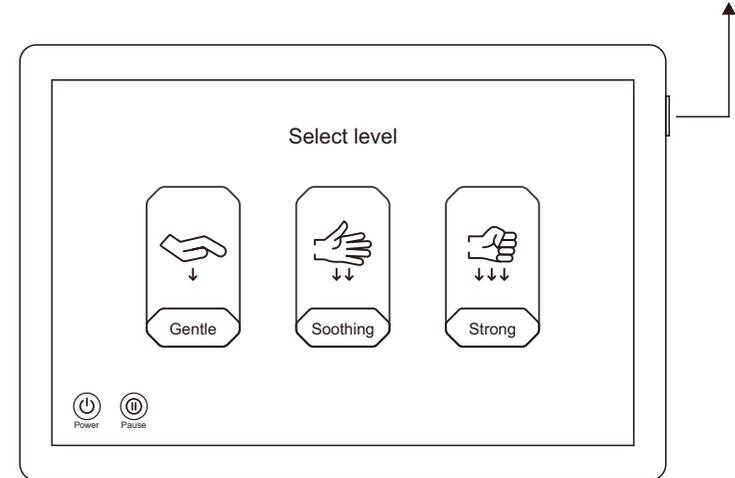


3. For automatic angular adjustment, select the automatic program, then the massage chair will be automatically adjusted to zero-gravity angle, and wait until its adjustment is completed. To skip a step, press the skip key to go directly to the next step.

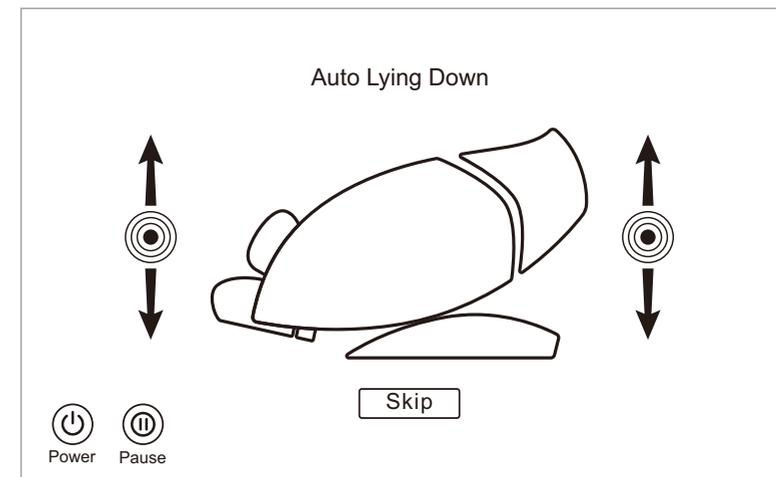


## Operation Instructions


4. Wait until body shape detection is completed, or you can press the skip key **Skip** to skip detection and start massage directly.

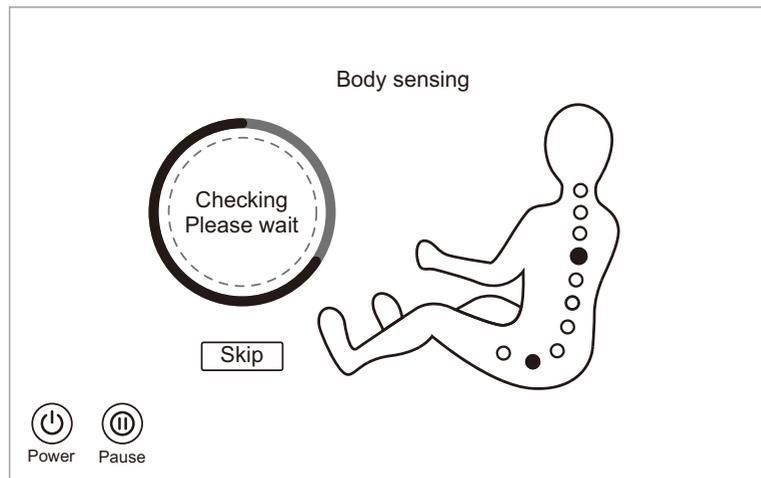

For fine adjustment of shoulder position, after body shape detection, the remote controller or a voice prompt will remind the user of fine adjustment of shoulder position. If the massage roller stops at the shoulder position, directly press the OK key **OK** to start massage. If not, use the Up key **▲** and Down key **▼** to adjust the massage roller to the shoulder position, and then press the OK key **OK** to start the massage. If no operation is made within 20s, directly default the current massage roller position for the shoulder position and start massage.

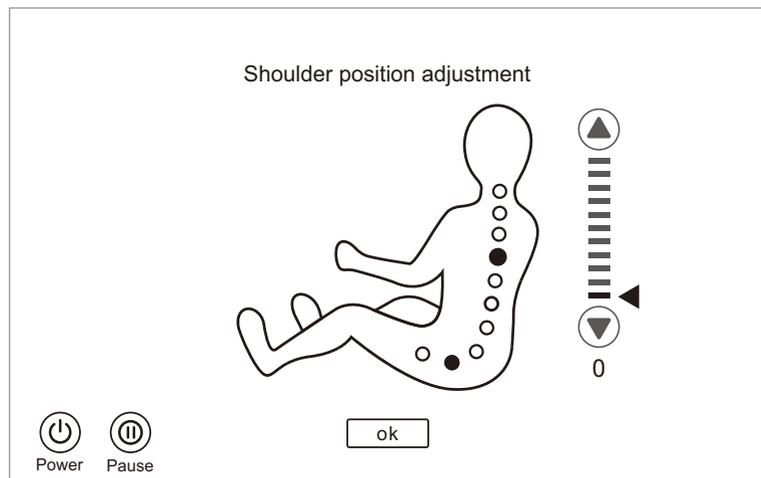

## Operation Instructions

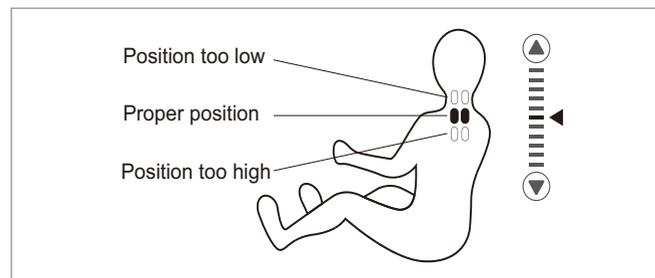

### II. Pause function (please use this function after the equipment is turned on)

After the massage chair is turned on, press the pause key **⏸** to enter the pause state, then all massage functions will be suspended, and press the pause key **▶** again to resume the previous massage state.


Note: In the pause state, all functions do not work except shutdown. If Pause more than 20 minutes, will shutdown reset automatic

### III. Automatic program (please use this function after the equipment is turned on)

1. Automatic program: As shown in the figure below, click the "Auto" **🔄** key in the left menu bar. After entering the automatic function interface, select the corresponding automatic program for massage according to the massage needs.

(1). In the automatic program selection interface, there are four automatic massage scenes and one "online program" automatic recommendation program. There are 20 automatic program options available: Total Relax, Stress Release, Full Airbag, Chinese Massage, Thai Massage, Meridian Treatment, Neck & Shoulder Care, Waist Care, Waist & Buttock Shape, Leg & Foot Relieve, President Cosy, Keep Fit, Superior Enjoyable, Office Regimen, Health Recharge, Energy Boost, Lunch Break, Sweet Dream, Brain Refresh, Rejuvenate.

(1). Select and click the desired automatic massage program and click to start massage.

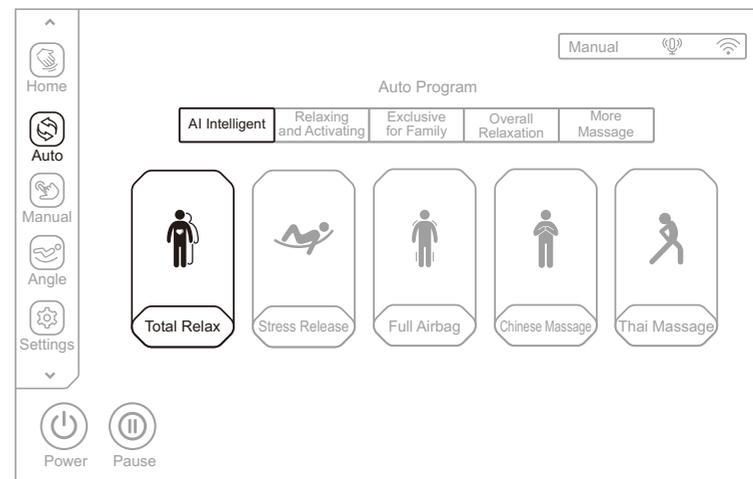

Schematic diagram of automatic massage program selection

## Operation Instructions

Massage scenes(AI Intelligent)	
Function	Description
Total Relax	The upper mechanical core is used to massage the neck, shoulders and Fengchi acupoint by kneading, and then work with tapping and Shiatsu to massage the whole body. The lower mechanical core is used to massage the waist and hip by kneading and tapping. The two mechanical cores coordinate to assist to relax the whole body muscle and alleviate fatigue.
Stress Release	Massage neck, shoulders and Dazhui acupoint mainly by kneading to relieve systemic pressure.
Full Airbag	Apply air massage on the whole body, with the sole roller and calf kneading massage. With the calf stretching function, the mechanical wave operates automatically with hand pressure.
Chinese Massage	By means of Traditional Chinese medicine massage technique mainly, apply 4D massage on the back and waist so as to promote the blood circulation of the back and waist, soothe the meridians and relieve the blockage of the back and waist through massage
Thai Massage	Mainly with air pressure clamping legs, hands, shoulders and hips, and then calves, backrest electric push rod with air pressure to adjust the various different angles to achieve stretching traction Role, while the movement of 3D massage hand holding against waist, so that the body is in the Thai stretching state. Note: Stretching amplitude is divided into three levels, choose gentle stretching amplitude lowest, choose soothing when the stretching amplitude moderate, choose strong when the maximum stretching amplitude.

## Operation Instructions

Massage scenes(Relaxing and Activating)	
Function	Description
Meridian Treatment	Massage the shoulders, neck and back and waist by means of kneading, tapping and Shiatsu techniques to the effect of meridian treatment.
Neck & Shoulder Care	Massage the neck and shoulders by means of kneading and stretching techniques mainly, and also the upper back by medical massage, and then press the Jianjing acupoint to relieve cervical spondylosis and achieve the effect of relaxing the muscles of the neck and shoulders.
Waist Care	Massage the waist by kneading, kneading&tapping, tapping, and then perform 4D massage of the waist
Waist & buttock Shape	Massage buttocks by kneading and medical massage mainly, and then through tapping and kneading, deeply massage buttocks and perineum, to relax the hip muscles and lift the hip, which is suitable for women massage, and also for men for maintenance of prostate.
Leg & foot Relieve	Massage the shoulders and waist by means of kneading, tapping, kneading and tapping mainly, apply air massage on the calves and feet for squeezing massage, allowing more soothing calf and foot massage.

## Operation Instructions


Massage scenes(Exclusive for Family)	
Function	Description
President Cosy	Massage the shoulders, neck, back and waist by means of kneading, tapping, kneading and tapping mainly, to relieve fatigue, promote blood circulation, and release stress by such deep massage. It is suitable for men, and the massage intensity is moderate.
Keep Fit	Massage the shoulders, neck, waist and hips by means of kneading and Shiatsu techniques, through the massage on the whole body, to relax the body and mind, and enjoy the queen-level treatment. It is suitable for women. Massage intensity is gentle.
Superior Enjoyable	Apply gentle massage on the whole body, with the sole roller and calf kneading massage. Calf stretching function is canceled, suitable for the elderly and people suffering stress on back.
Office Regimen	Massage the shoulders, neck and waist by means of kneading, tapping, kneading and tapping techniques mainly, to relieve shoulder and neck pain, improve lumbar muscle soreness and maintain lumbar spine through such deep massage. It is suitable for office white-collar and sedentary people.
Health Recharge	Deeply massage the whole body by means of kneading, tapping and Shiatsu techniques, to promote blood circulation throughout the body and prevent blood clots. It is suitable for people who live at home for a long time and do not like to go out, and the massage intensity is moderately gentle.

## Operation Instructions


Massage scenes(Overall Relaxation)	
Function	Description
Energy Boost	Deeply massage the whole body by means of kneading, tapping and Shiatsu techniques, to wake up the vitality of the human body and stimulate the energy.
Lunch Break	Massage the back and waist by means of kneading and tapping techniques, and press the Shenyuacupoint, to improve the quality of lunch break, so that the user is more energetic in afternoon work.
Sweet Dream	Massage the shoulders, neck, back and waist by means of kneading and medical massage techniques, and press the acupoints of Fengchi and Shenyu, to improve the sleep quality and help sleep. It is suitable for people suffering from poor sleep.
Brain Refresh	Massage the shoulders, neck and back and waist by means of kneading, 4D kneading and Shiatsu techniques to achieve a high degree of physical and mental harmony through deep massage. It is suitable for people who are mentally retarded and overused. The massage intensity is gentle.
Rejuvenate	Massage the back and waist mainly by tapping and kneading & tapping techniques to promote blood circulation, eliminate local muscle pain, accelerate lactic acid excretion, and rekindle human vitality

## Operation Instructions

2. More programs: Enter the automatic mode interface as shown below, select the "More Programs" key, then click the "+" key to select the "Undownloaded Programs" key in the pop-up window, and then select the corresponding automatic message program according to the massage needs. Then click the "Download" key to download after selecting. Click the "Return" key to exit the download interface. Note: This function can only be used when the WIFI connection is successful. If the WIFI network is not connected or the connection is not successful, the online program will not be displayed on the interface.

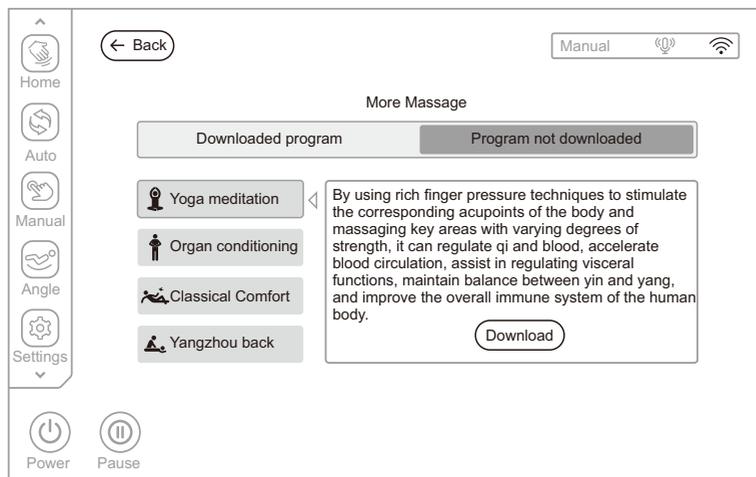

3. After the download is successful, you can select this function for massage in more program interfaces; such as Yoga meditation, Organ conditioning, Classical Comfort, Yangzhou back rubbing, etc. Note: More programs are automatically recommended by the system, and the automatic name is not unique. .

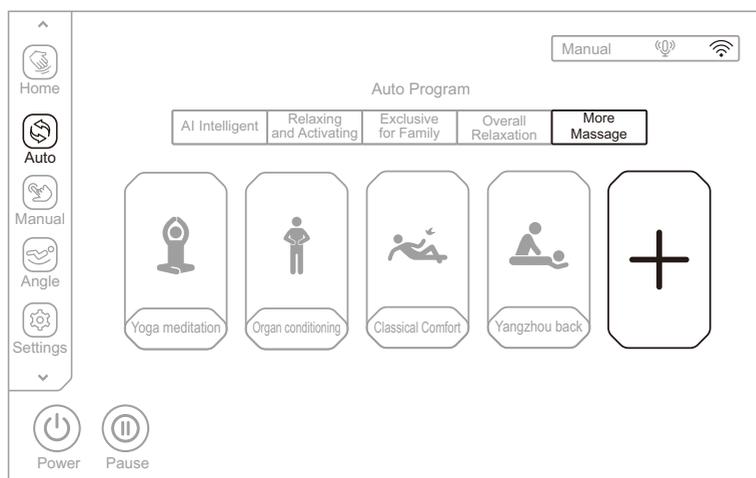


## Operation Instructions

### IV. remote program (please use this function after the equipment is turned on)

1. Click the "Manual" key in the left menu bar to enter the manual menu, then select manual massage functions such as "Core (upper), Core (lower), and Air pressure massage" according to the massage needs.

(1). Core(upper): After entering the manual menu interface as shown below, select the "Core(upper) or Core(lower)" key, then select the massage functions according to the massage needs, including massage technique, massage area, 4D intensity, massage hand adjustment, massage width, massage speed massage functions.

1). Massage techniques: There are a total of 17 massage techniques available, including no technique, kneading (with 7 modes of cyclic switching), tapping I, tapping II, kneading & tapping, shiatsu I, shiatsu II, shoulder lifting & grasping, 4D I, 4D II, 4D III, 4D IV, etc. (Note: Click on the "left arrow <" and right arrow >" key in the technique adjustment menu can scroll left and right to switch between displaying more massage techniques.

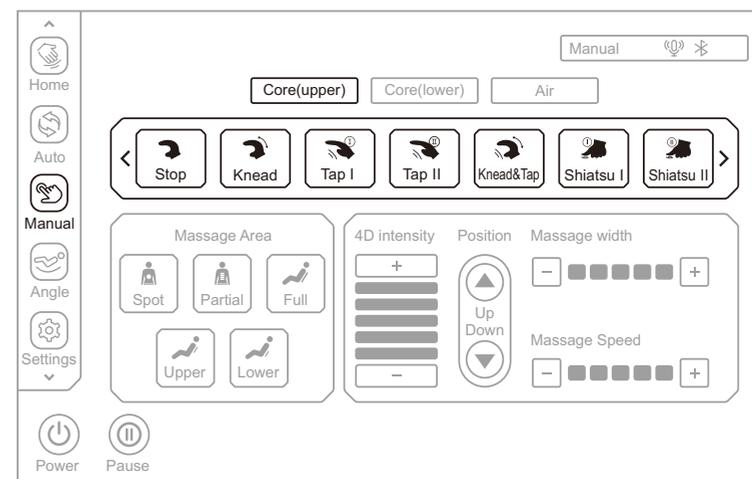


Manual mode-Core(upper) diagram

Function	Message roller adjustment	
Stop	No technique is applied.	Adjustable speed in five gears
Knead	The speed, intensity and be adjusted.	
Tap I	The speed, width, intensity and be adjusted.	
Tap II	The speed, width, intensity and be adjusted.	
Knead&Tap	The speed, intensity and be adjusted.	Adjustable width in five gears
Shiatsu I	The speed, width, intensity and be adjusted.	
Shiatsu II	The speed, width, intensity and be adjusted.	Adjustable intensity in five gears
Grasp	The speed, intensity and be adjusted.	
4D I	The speed, intensity and be adjusted.	
4D II	The speed, intensity and be adjusted.	
4D III	The speed, width, intensity and be adjusted.	
4D IV	The speed, width, intensity and be adjusted.	

## Operation Instructions

- (2).Core(lower): After entering the manual menu interface as shown below, select the "Core(lower) Manual(down)" key, and then select massage functions according to massage needs, including massage techniques, massage area, back mechanism adjustment, massage width, massage speed massage functions.
- 1).Massage techniques: The massage technique includes no technique, kneading, tapping I, tapping II, kneading & tapping, shiatsu I optional techniques.

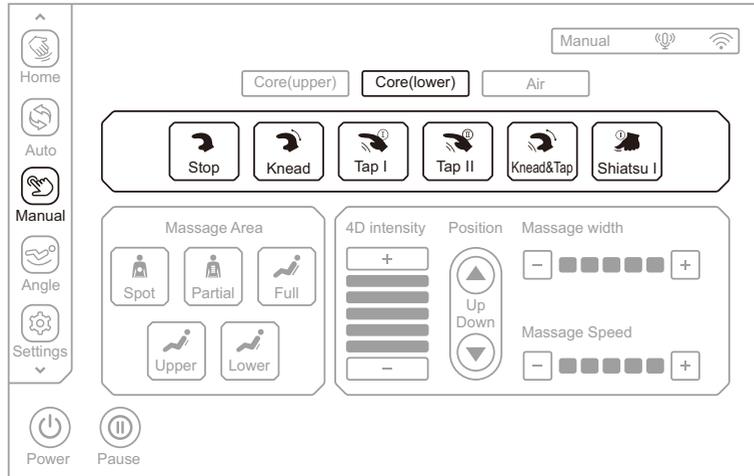


Manual mode-Core(lower) diagram

Function	Message roller adjustment	
Stop	No technique is applied.	Adjustable speed in five gears Adjustable width in five gears Adjustable intensity in five gears
Knead	The speed, intensity and be adjusted.	
Tap I	The speed, width, intensity and be adjusted.	
Tap II	The speed, width, intensity and be adjusted.	
Knead&Tap	The speed, intensity and be adjusted.	
Shiatsu I	The speed, width, intensity and be adjusted.	


## Operation Instructions

Note: In the "Home" interface, you can also click the massage technique key (Only the massage techniques of the upper back mechanism can be adjusted),to select the corresponding massage technique in the pop-up menu for massage (this function is a shortcut for switching massage techniques in the current status page of the remote program - technique adjustment).

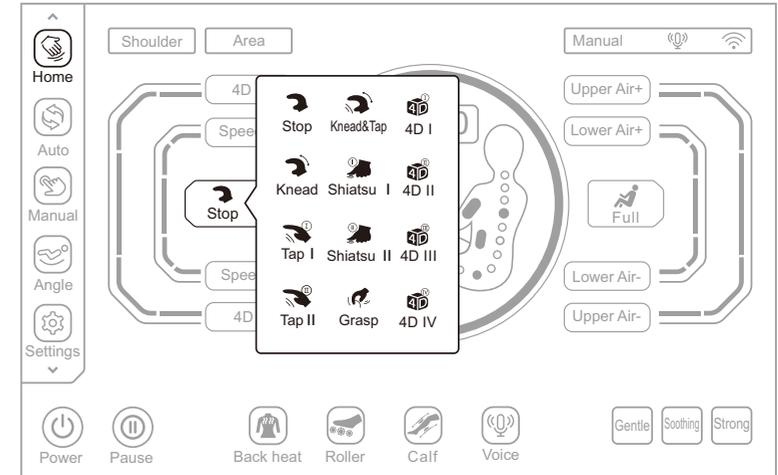

Current Status-Core(upper) Technique Selection Diagram

- 2.Massage area: After entering the manual menu interface as shown below, select the "Core(upper) or Core(lower)"key, then select the function of the massage area according to the massage needs.
- (1).Core(upper):There are 5 massage areas available, including fixed point, partial, full back, upper back, and lower back. Select the corresponding massage area from the massage area menu to perform the massage.

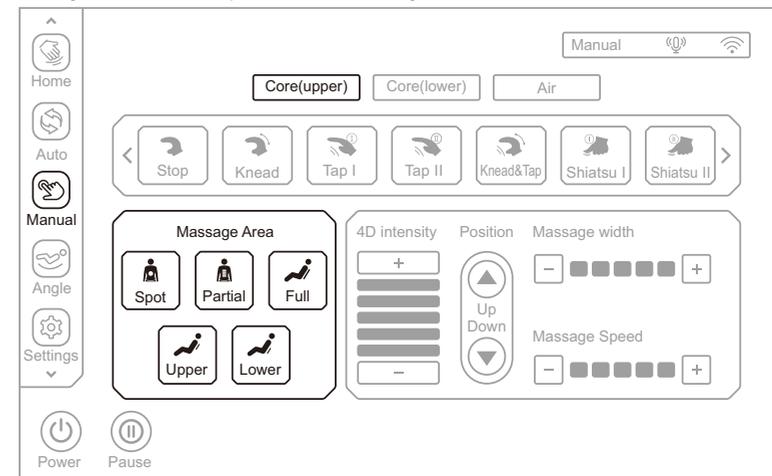


Manual Mode -Core(upper) Massage Area Selection Diagram

## Operation Instructions

Key	Description
	Fixed-point massage at fixed-point position.
	Small-scope local massage back and forth.
	Full back massage back and forth.
	Upper back massage back and forth.
	Lower back massage back and forth.

(2).Core(lower): There are 5 massage areas available, including fixed point, partial, full back, upper back, and lower back. Select the corresponding massage area from the massage area menu to perform the massage.

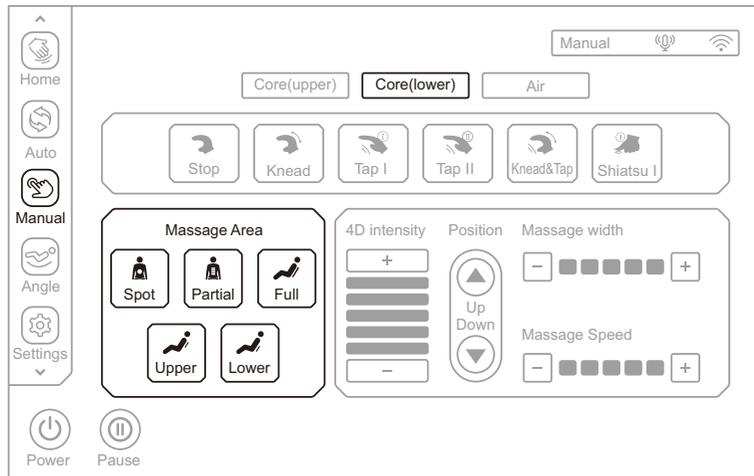


Manual Mode -Manual(down) Massage Area Selection Diagram

Key	Description
	Fixed-point massage at fixed-point position.
	Small-scope local massage back and forth.
	Full back massage back and forth.
	Upper back massage back and forth.
	Lower back massage back and forth.


## Operation Instructions

Note: In the "Home" interface, you can also click the massage area key **Area** (Only the massage area of the upper back mechanism can be adjusted),to select the corresponding massage area in the pop-up menu for massage (this function is a shortcut for switching massage areas in the current status page of the remote program - massage area).

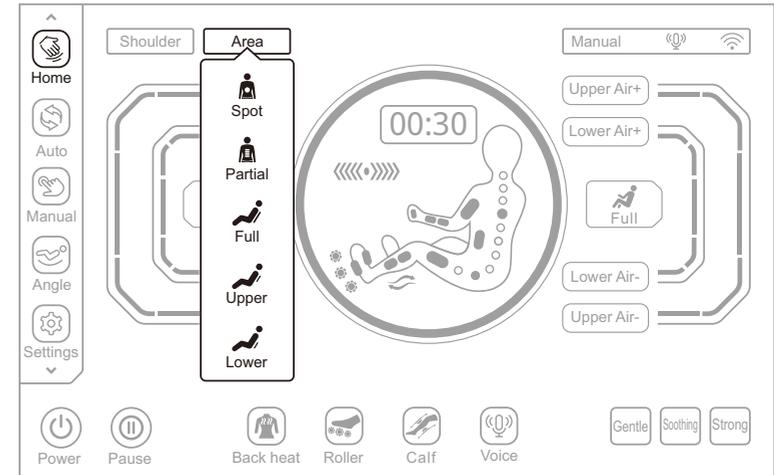

Current Status - Core(upper) Massage Area Diagram

3. 4D intensity: After entering the manual menu interface as shown below, select the "Core(upper)" key, and then select the 4D intensity plus key "+" or minus key "-" according to the massage needs to adjust the 4D intensity; There are 1-5 levels 4D intensity available, with 1 level being the weakest and 5 level being the strongest. The stronger the 4D intensity, the higher the pushing out of the massage wheel, and the greater the massage intensity. Note: Core (lower) 4D intensity is not adjustable.

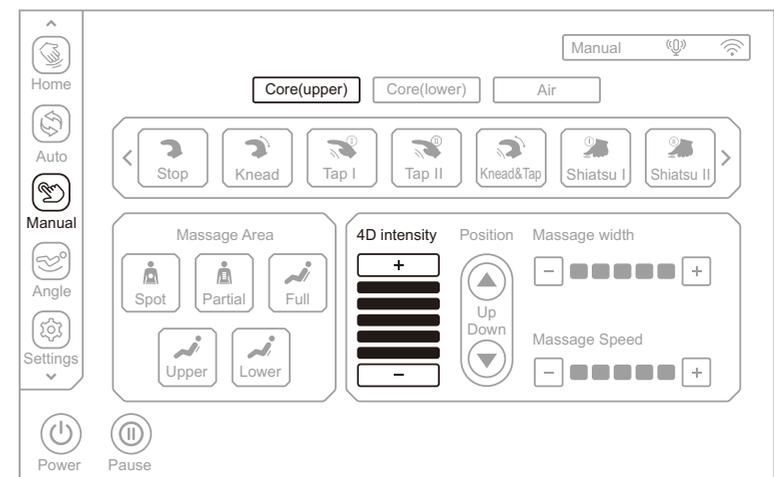


Manual Mode - Core(upper) 4D Intensity Diagram

## Operation Instructions




Key	Description
	Press this key to increase 4D intensity which is adjustable from 1 to 5.
	Press this key to decrease 4D intensity which is adjustable from 1 to 5.

Note: In the "Home" interface, you can also select the 4D intensity + key or 4D intensity - key to adjust the 4D intensity (Only the 4D Intensity of the upper back mechanism can be adjusted). This function is a shortcut to the 4D intensity in the current status page of the remote program-4D intensity.

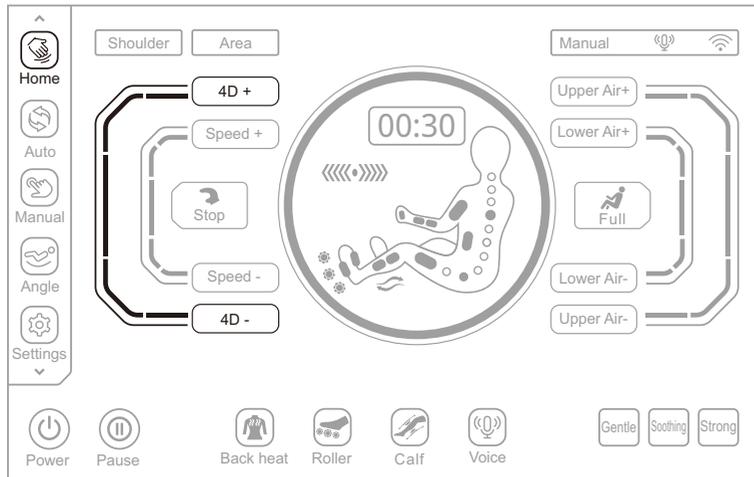


Current Status - Core(upper) 4D Intensity Diagram

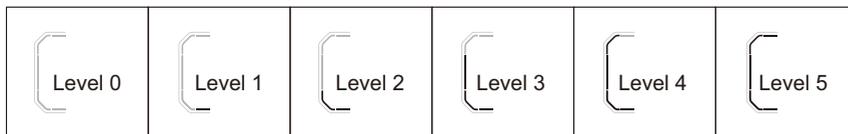

Key	Description
	Press this key to increase 4D intensity which is adjustable from 1 to 5.
	Press this key to decrease 4D intensity which is adjustable from 1 to 5.

## Operation Instructions


4. Back mechanism up and down adjustment: After entering the manual menu interface as shown below, you can select the "Core(upper) or Core(lower)" key, and then select the mechanism up arrow or down arrow according to the message needs to fine-tune the message mechanism up and down. The mechanism position should be adjusted in the fixed point and partial message area of the manual mode.

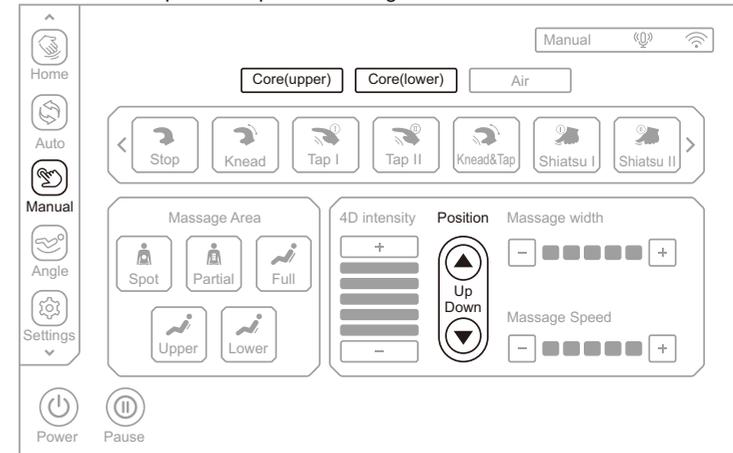

Manual Mode - Core(upper) and Core(lower) Diagram of the back mechanism Adjustment

5. Message width: After entering the manual menu interface as shown below, select the "Core(upper) or Core(lower)" key, and then select the message width plus key or minus key according to the message needs to adjust the message width.

- (1).Core(upper): There are 1-5 levels message width available, with 1 level being the narrowest and 5 being the widest. Please use them in the following message techniques: tapping I, tapping II, shiatsu I, shiatsu II, 4D III, 4D IV.
- 1).Users must enter manual mode after selecting message technique or message area before adjusting the width.

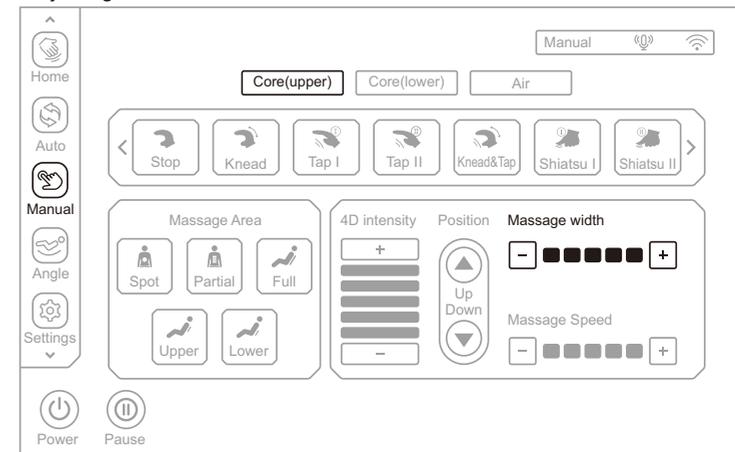


Manual Mode - Core(upper) Message Width Adjustment Diagram

## Operation Instructions

Level 0	Level 1	Level 2	Level 3	Level 4	Level 5
Key	Description				
	Press this key to increase message width which is adjustable from 1 to 5.				
	Press this key to decrease message width which is adjustable from 1 to 5.				

(2).Core(lower): There are 1-5 levels message width available, with 1 level being the narrowest and 5 level being the widest. Please use them in the following message techniques: tapping I, tapping II, shiatsu I.

1).Users must enter manual mode after selecting message technique or message areas before adjusting the width.

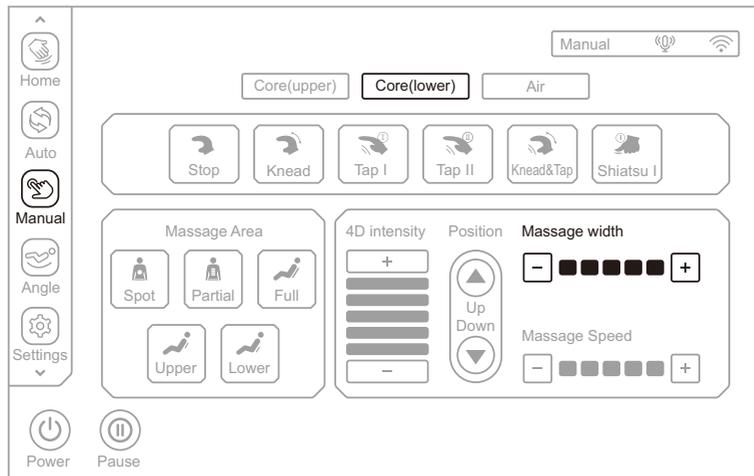


Level 0	Level 1	Level 2	Level 3	Level 4	Level 5
Key	Description				
	Press this key to increase message width which is adjustable from 1 to 5.				
	Press this key to decrease message width which is adjustable from 1 to 5.				

## Operation Instructions

6.Message speed: After entering the manual menu interface as shown below, select the "Core(upper) or Core(lower)" key, and then select the message speed plus key "+" or minus key "-" according to the message needs to adjust the message speed. There are 1-5 levels message speeds available, with 1 level being the slowest and 5 level being the fastest, and the speed cannot be adjusted when the massage technique stops.

(1).Users must enter manual mode after selecting the massage technique or message area before adjusting the speed.

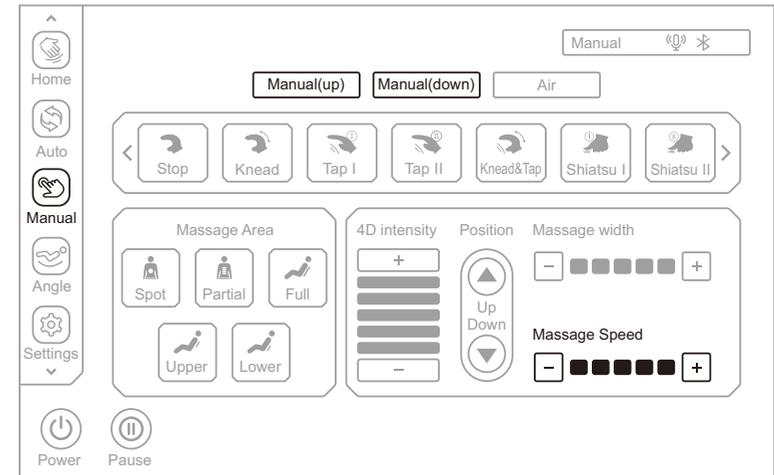


Manual Mode - Core(upper) and Core(lower) Message Speed Adjustment Diagram


Level 0	Level 1	Level 2	Level 3	Level 4	Level 5
Key	Description				
	Press this key to increase message speed which is adjustable from 1 to 5.				
	Press this key to decrease message speed which is adjustable from 1 to 5.				

## Operation Instructions

Note: In the "Home" interface, you can also select the massage speed + **Speed +** key (Only the massage Speed of the upper back mechanism can be adjusted) or massage speed - **Speed -** key to adjust the massage speed.

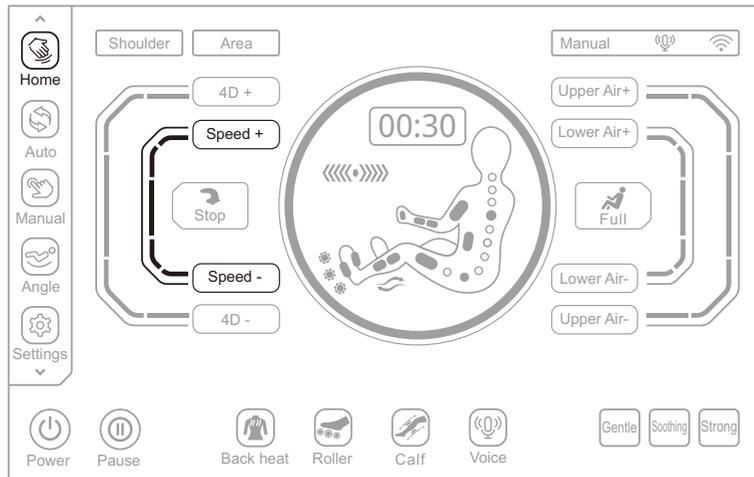

Current Status - Core(upper) and Core(lower) Massage Speed Diagram

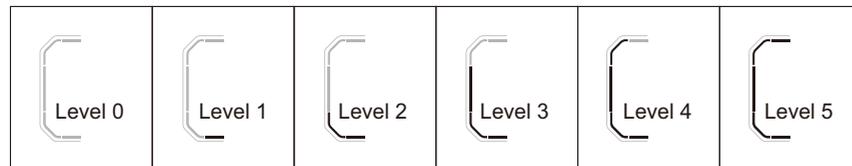


Key	Description
<b>Speed +</b>	Press this key to increase massage speed which is adjustable from 1 to 5.
<b>Speed -</b>	Press this key to decrease massage speed which is adjustable from 1 to 5.

7. Air pressure massage : After entering the manual menu interface as shown below, select the "Air pressure massage" key, the air pressure massage includes full body pressure, upper body pressure, and lower body pressure and air pressure intensity massage.

(1). After entering the air pressure massage interface as shown below, select the "full body, upper body or lower body" key to turn on or off the air pressure function according to the massage needs. If all is turned off, all air pressure functions will be

## Operation Instructions

turned off; there is also a hand roller massage function on the inside of the arm. When the full body air pressure or upper body air pressure is turned on, the hand roller will automatically operate with the air pressure, which can relieve arm muscle stiffness or tension.

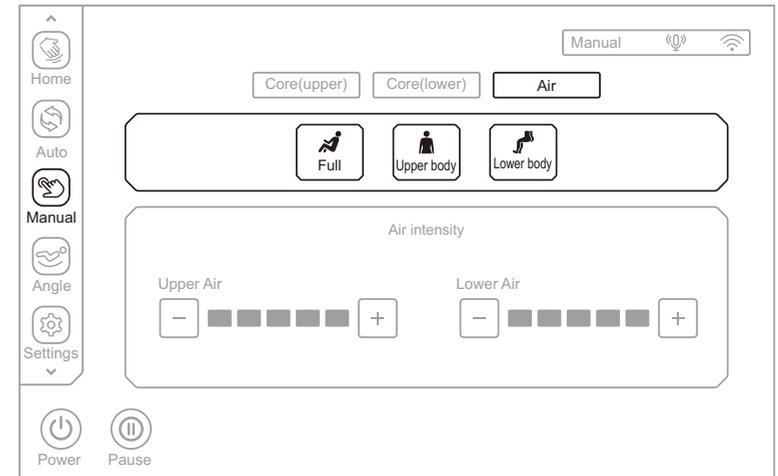


Key	Description
	Press this key to enable or disable the whole body air massage function.
	Press this key to enable or disable the upper body air massage function.
	Press this key to enable or disable the lower body air massage function.

Air pressure display		
Upper body air pressure	Lower body air pressure	Whole body air pressure


## Operation Instructions

Note: In the "Home" interface, you press also air massage  key and select corresponding air mode in the pop-up menu. (This function is a shortcut to the air massage in the current status interface of the remote function - air massage.)

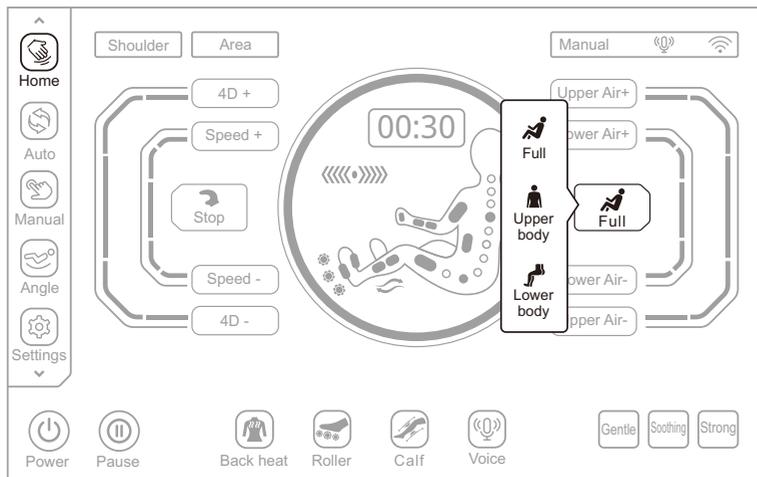


Current status - Schematic diagram of air massage

8. Air pressure intensity: After entering the manual menu interface as shown below, select the "Air pressure massage" key to turn on the air pressure massage function of different parts according to the massage needs, and then select the upper body air pressure plus key "+" or upper body air pressure minus key "-" to adjust the upper body pressure intensity; and also can select the lower body air pressure plus key "+" or lower body air pressure minus key "-" to adjust the lower body pressure intensity; There are 1-5 levels air pressure intensity available, with 1 level being the weakest and 5 level being the strongest.

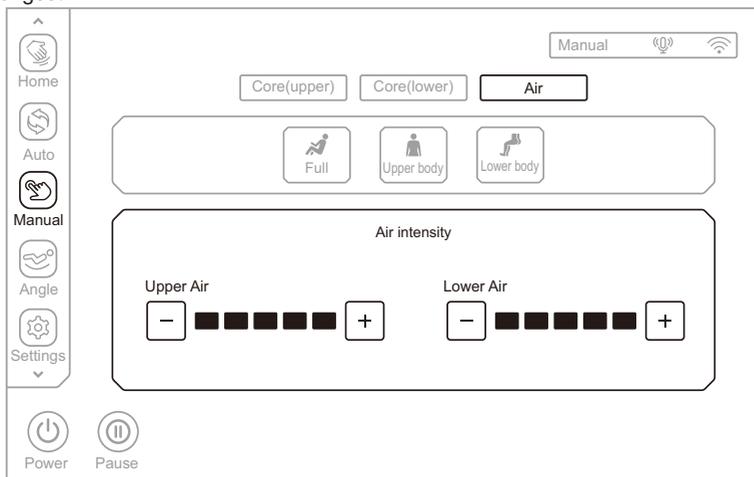


## Operation Instructions

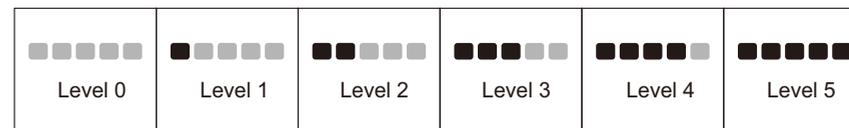

Key	Description
	Press this key to increase the air intensity which is adjustable from 1 to 5.
	Press this key to decrease the air intensity which is adjustable from 1 to 5.

Note: In the "Home" interface, you can select the upper body air pressure +  key or the upper body air pressure -  key to adjust the upper body air pressure intensity; can also select the lower body air pressure +  key or the lower body air pressure -  key to adjust the lower body air pressure intensity, the air pressure intensity is divided into 5 levels.

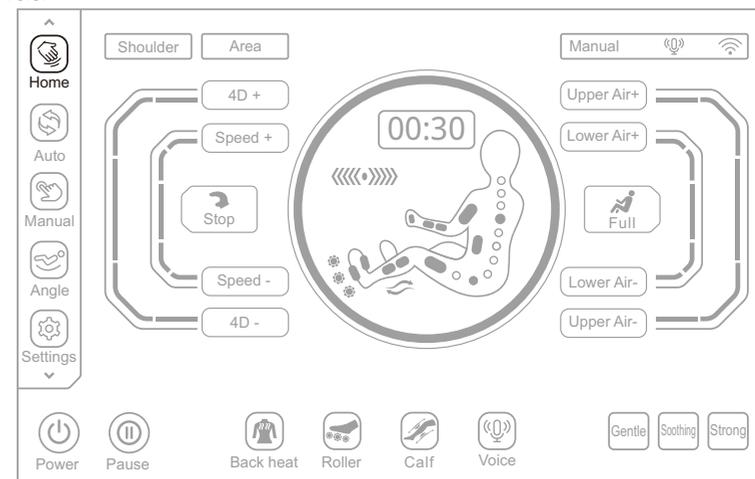

Home - Schematic diagram of air pressure intensity




Key	Description
	Press this key to increase the air intensity which is adjustable from 1 to -5.
	Press this key to decrease the air intensity which is adjustable from 1 to -5.

## Operation Instructions

### V. Seat adjustment

9. Select and click the "Angel" key in the menu bar on the left side of the remote controller screen, after entering the sitting adjustment interface as shown below. According to the massage needs, select the sitting angle adjustment, including foot mechanism extension, foot mechanism shortening, leg up, leg down, whole up, whole down, back up and back down, zero gravity I, zero gravity II.

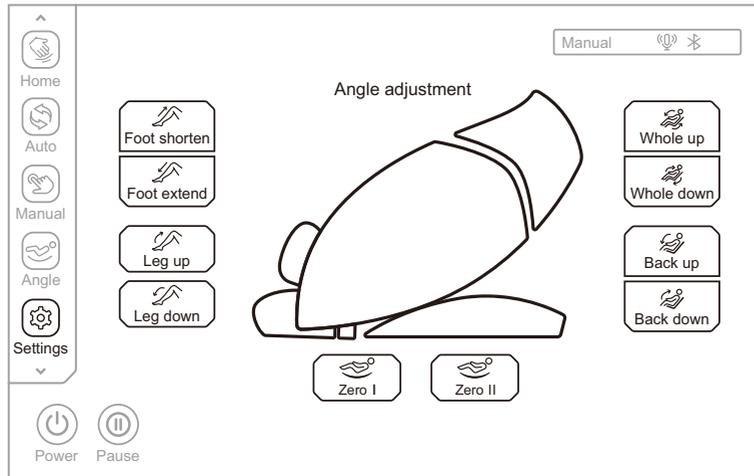

Schematic diagram of sitting posture adjustment

#### 1.Zero-gravity adjustment

Key	Description
 Zero I	Zero-gravity 1 key: automatically adjust the position of leg unit and backrest unit to zero-gravity 1 position.
 Zero II	Zero-gravity II key: automatically adjust the position of leg unit and backrest unit to zero-gravity II position.

#### 2.Foot shorten/Foot extend adjustment

Key	Description
 Foot shorten	Foot shorten key: remotely adjust shortening of the leg unit; press and hold this key to move the leg unit up slowly and stop when released.
 Foot extend	Foot extend key: remotely adjust extension of the leg unit; press and hold this key to move the leg unit down slowly and stop when released.

## Operation Instructions

### 3.Leg unit extension/shortening adjustment

Key	Description
 Leg up	Leg unit Up key: press and hold this key to slowly raise the leg unit, and release it to stop rising; after the leg unit rising action is completed, the leg unit will automatically detect the foot length.
 Leg down	Leg unit Down key: press and hold this key to slowly lower the leg unit, and release it to stop lowering; after the leg unit lowering action is completed, the leg unit will automatically detect the foot length.

### 4.Linkage lifting Angle adjustment

Key	Description
 Whole up	Linkage Up key: press and hold this key to slowly raise the backrest unit while slowly lowering the leg unit, and release it to stop raising the backrest unit or lowering the leg unit; after the linkage rising action is completed, the leg unit will automatically detect the body height.
 Whole down	Linkage Down key: press and hold this key to slowly lower the backrest unit while slowly raising the leg unit, and release it to stop lowering the backrest unit or raising the leg unit; after the linkage lowering action is completed, the leg unit will automatically detect the body height.

### 5.Backrest unit angular adjustment


Key	Description
 Back up	Backrest unit Up key: press and hold this key to slowly raise the backrest unit and release it to stop rising.
 Back down	Backrest unit Down key: press and hold this key to slowly lower the backrest unit and release it to stop lowering.

## Operation Instructions

### VI. Setting (please use this function after the equipment is turned on)

Click the "Settings" key in the menu bar on the left side of the remote controller screen to enter the setting interface, after entering the sitting adjustment interface as shown below can view the product number, software version number, ID code and firmware version number. Also can perform system settings in the interface, including Bluetooth, screen brightness, language selection, LED, screen shutdown, voice control, key tone, network connection system setting functions.

- 1.Product model, software version, product serial number, and firmware version show the information of current device.
- 2.Voice Control: Click Voice Control switch to enable or disable the Voice Control function. After enabling the voice function, you can control the massage chair by voice according to the content of the voice entry.

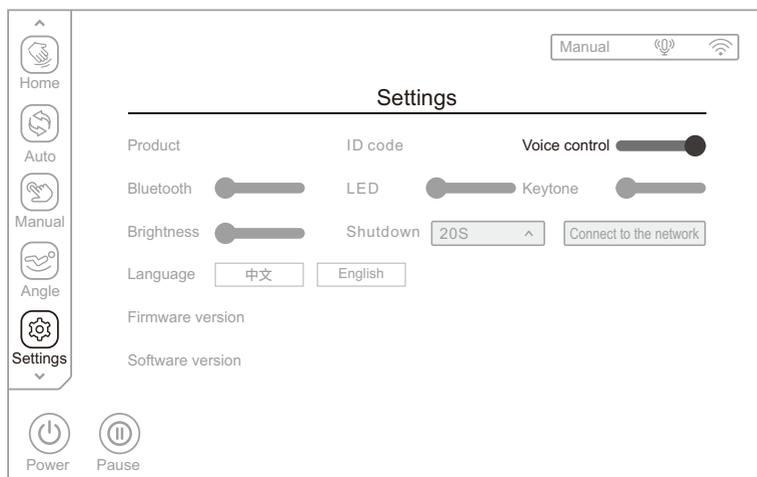

Schematic diagram of Setting

- (1).In the massage chair open state, you can short press the "Voice control key" to wake up the voice assistant feature (If unable to wake up, please enter the setting interface to check whether the voice control switch is on or not, if not, please turn on the voice control switch).or you can near the left armrest position to say "Hi Alice" or "Hey Alice" to wake up the voice assistant, when the voice assistant replies "I'm here", it represents that it has been woken up, and after opening the voice control assistant, you can use the voice control assistant function to control the massage chair.
- (2).You can also short press the "Voice key" button in the armrest shortcut key to wake up the voice assistant, and long press and hold this key for 3 seconds to turn it on or off.
- (3).After the voice assistant wakes up, please say the command within 6 seconds to realize the function control of the Massage chair. After the voice assistant responds to the command, you can continue to say the command. The interval between two adjacent commands cannot exceed 6 seconds, otherwise you need to wake up the voice assistant again. The detailed voice command table is as follows:

Attention: When awakening the voice control function, the speaking speed should not be too fast, and voice commands should be issued according to Voice Control Entry.

## Operation Instructions


Voice Control Entry		
Entry: "Hi Alice" or "Hey Alice". Answer: I am here.		
No.	Voice control entry	Answer entry
1	Massage on	Answer: Ok, Massage on
2	Massage close	Answer: Ok, Massage close
3	Total Relax	Answer: Ok, Total Relax
4	Energy Boost	Answer: Ok, Energy Boost
5	Sweet Dream	Answer: Ok, Sweet Dream
6	Neck & Shoulder Care	Answer: Ok, Neck & Shoulder Care
7	Lunch Break	Answer: Ok, Lunch Break
8	Thai Massage	Answer: Ok, Thai Massage
9	Open the air pressure	Answer: Ok, Open the air pressure
10	Close the air pressure	Answer: Ok, Close the air pressure
11	Up the seat position	Answer: Ok, Up the seat position
12	Down the seat position	Answer: Ok, Down the seat position
13	Change the other mode	Answer: Ok, Change the other mode
14	Go little down	Answer: Ok, Go little down
15	Go little up	Answer: Ok, Go little up

Note: commands 14 and 15 can only be used after command 13.

## Operation Instructions


### 3. Bluetooth (Operation Instructions for Bluetooth Speaker Play)

- (1) Bluetooth: After entering the setting interface as shown below, click the "Bluetooth" switch to turn on or off the Bluetooth function. After the Bluetooth function is turned on, the audio source device with Bluetooth function (such as mobile phone, MID tablet, etc.) can be paired and connected with the Bluetooth module of the massage chair, and the music played by the audio source device can be transmitted wirelessly to the massage chair sound system through Bluetooth for music playback.
- (2) Enter the smart device main menu. Open "Settings" and select the "Bluetooth" option. Open "Bluetooth", and Bluetooth will automatically "Search for a New Bluetooth Device".
- (3) The smart device will search for the corresponding Bluetooth model (e.g. IMCM-XXXX). Click the "Match" button. If you are asked whether to match with the device, you just select "Match" to complete matching.
- (4) Turn on "Music Player" in the smart device and select the song to play.

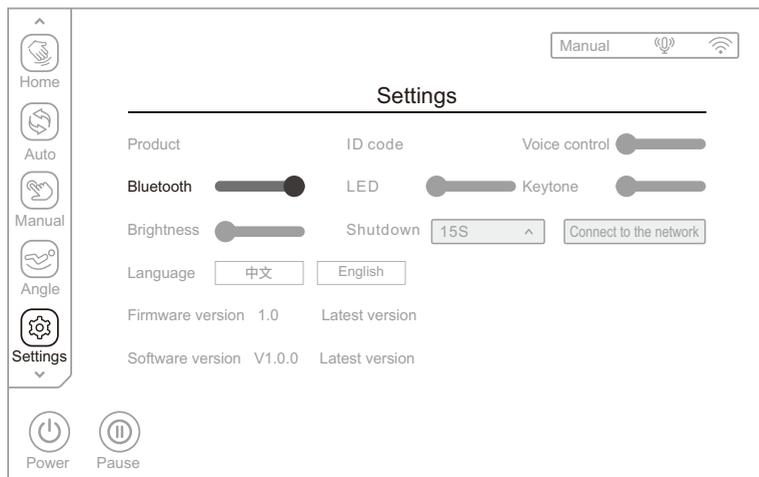


## Operation Instructions

4. LED: After entering the setting interface as shown below, click the "LED" key to turn on or off the ambient light function.

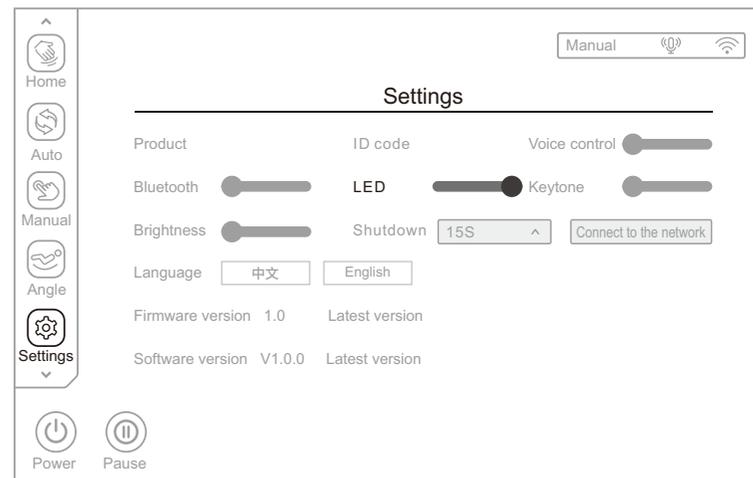


5. Key tone: After entering the setting interface as shown below, click the "Key tone" key, and then turn on or off the key tone function according to the massage needs. After the key tone function is turned on, a sound will be emitted when the remote controller key is clicked; if it is turned off, there will be no key sound.

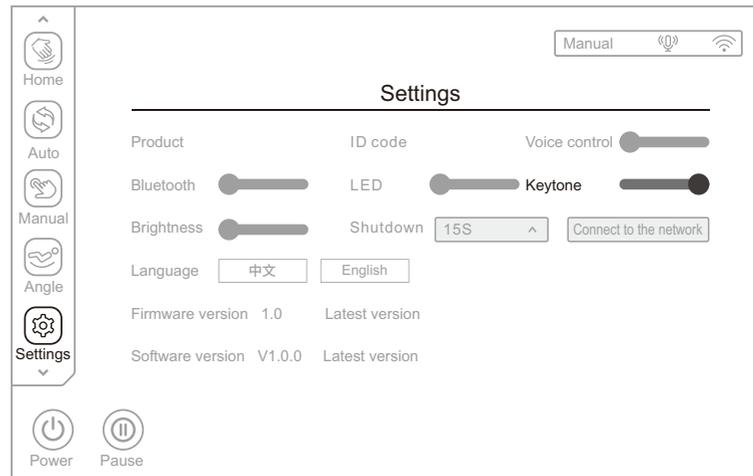


## Operation Instructions

6. Screen brightness: After entering the setting interface as shown below, click the "Brightness" slider, and then press and hold to slide left and right to adjust the brightness of the hand controller screen according to the message needs.

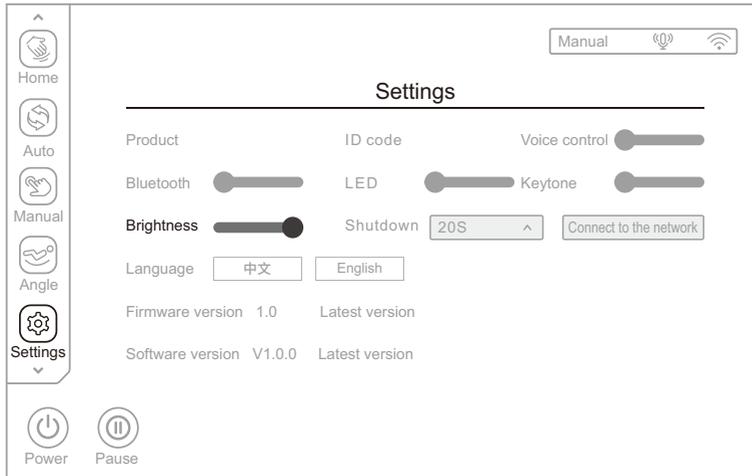


7. Screen shutdown: After entering the setting interface as shown below, click the "Shutdown" key, and then select the screen shutdown time in the drop-down pop-up window according to the message needs. There are 6 screen shutdown time options available, including 15 seconds, 1 minute, 5 minutes, 10 minutes, 20 minutes, and never screen shutdown.

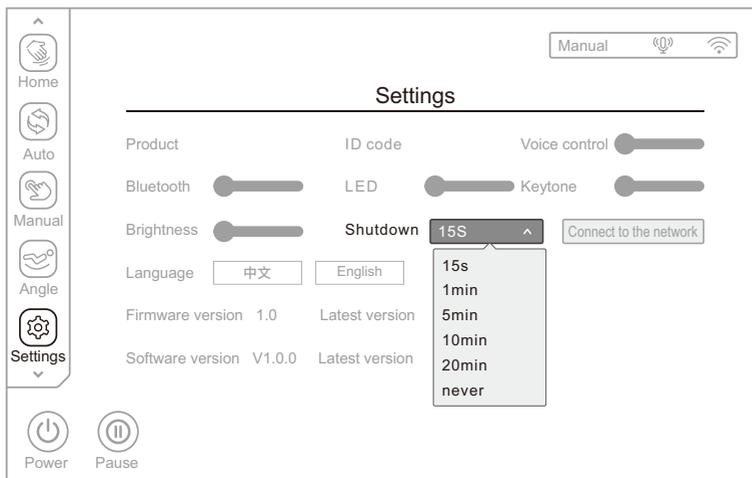


## Operation Instructions

8. Language selection: After entering the setting interface as shown below, select different languages according to the user's needs. The default language is English and Chinese can be selected.

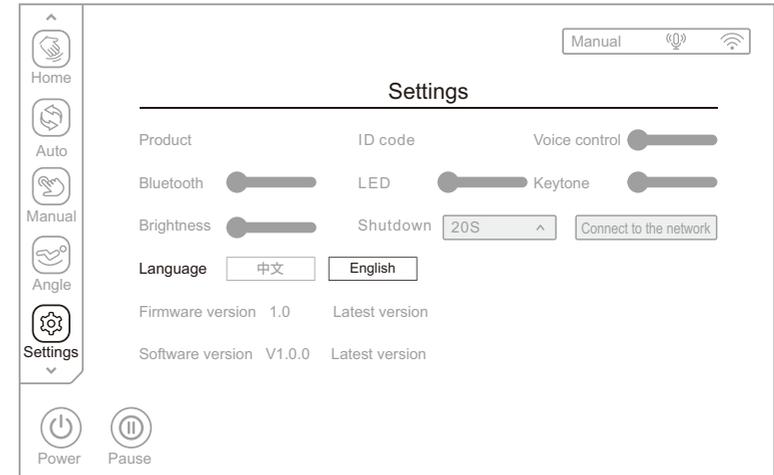

9. Network connection: After entering the setting interface as shown below, select the "Click to connect to the network" key, the system will jump directly to the smart device WIFI networking interface, and then select the corresponding network name according to the needs to connect the device. After the connection is successful, the WIFI icon will be highlighted. Note: If there are new versions of the firmware and software versions, you can click to update.

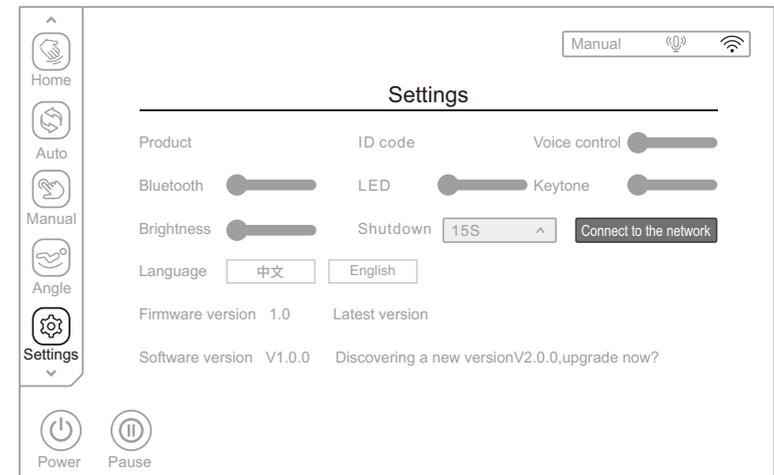


## Operation Instructions

10. Version upgrade: After entering the setting interface as shown below, if you find that the version needs to be upgraded, select the text "Discover new version, click to upgrade" after "Firmware version or software version" according to the system requirements to upgrade the system version. During the version upgrade process, "Keep the massage chair powered and do not operate the massage chair at will." Note: Please refer to the upgraded version for the version number.




### VII. Health detection (please use this function after the equipment is turned on)


1. Health detect starts: Click the "Health" button in the menu bar on the left side of the display screen to enter the health detection interface, press the start detection button to perform health detection, and then gently place the index finger or middle finger on the sensor. After a few seconds, it will display the real-time data of heart rate, blood oxygen and microcirculation, waiting for the completion of the detection progress.

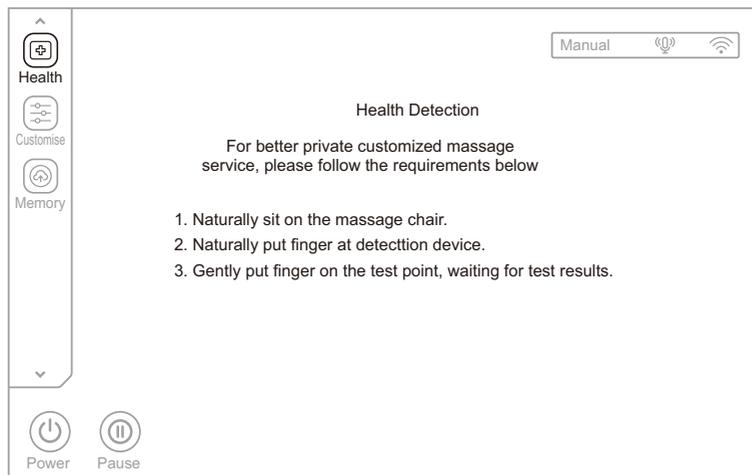

## Operation Instructions

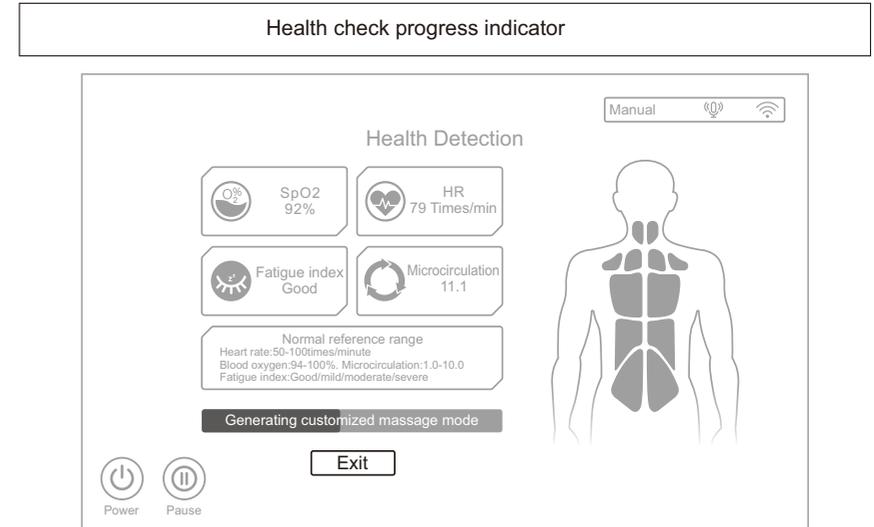


2. Recommended program: When normal detection is completed, it will display the heart rate, blood oxygen, and the fatigue level, respectively. The blood oxygen means with the blood oxygen concentration ranging from 95% to 99% normally. The fatigue levels include Good, Mild, Moderate and Severe. Based on your fatigue level, an automatic program will be recommended for you. Select "Yes" to start using the recommended program and "No" to return to the massage state before the health detection.

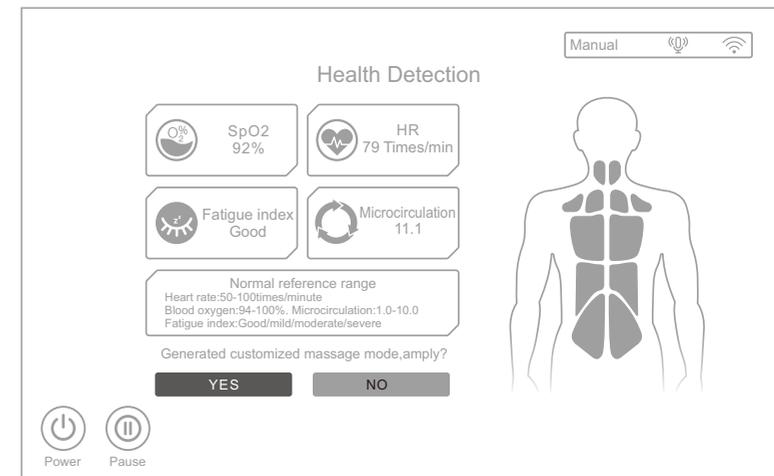


## Operation Instructions

3.No valid data is detected: If no valid data is detected, the user will be prompted to ask whether to re-detect. Select "Yes" to restart the health detection, and "No" to exit the detection and return to the massage state before the health detection.

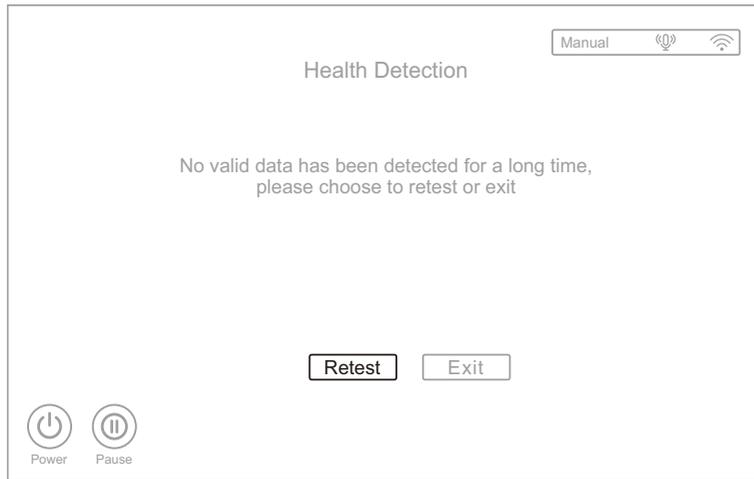


4.Exit health detection: During health detection, press the **Exit** key to exit the detection and return to the massage state before the health detection.

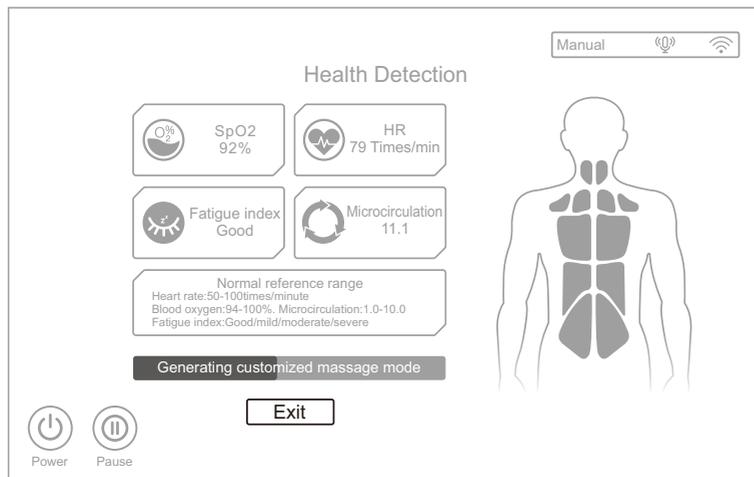

## Operation Instructions


### VIII.Custom (please use this function after the equipment is turned on)

Click the "Custom" key in the menu bar on the left side of the display to enter the custom setting interface and select either Custom I or Custom II (only if the corresponding custom has been previously set and saved) for massage.

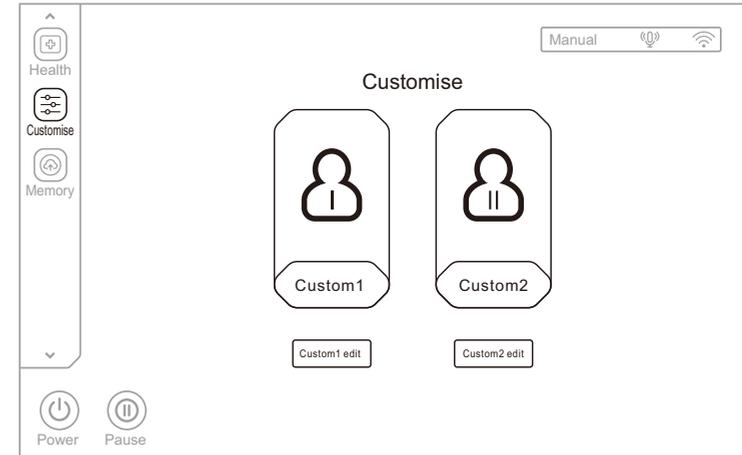

Schematic diagram of Custom


Click Custom I Setting or Custom II Setting to enter the Custom Setting interface, then select the preferred massage technique whose icon will be highlighted after selection, and select the massage interval, 4D intensity, air massage, massage width, massage speed, air intensity, back heating, calf kneading and other functions, then click Save to save the current settings as Custom I and Custom II. After the settings are saved successfully, the custom program will be immediately available and can be used for the next massage by clicking the saved custom program.

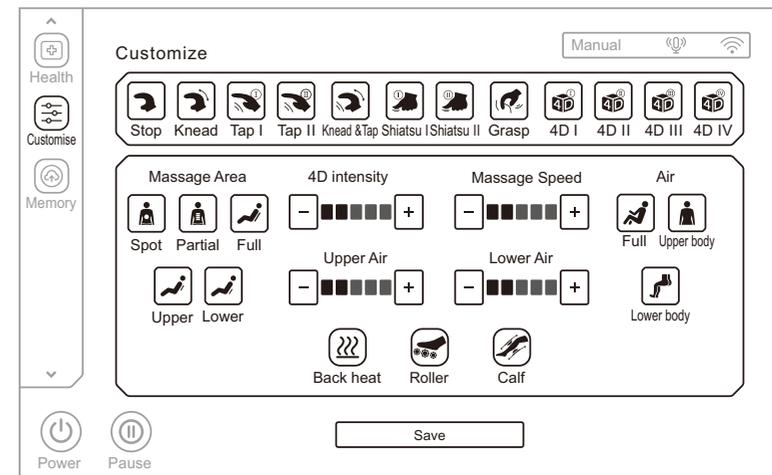

## Operation Instructions

### IX.Storage (please use this function after the equipment is turned on)

Click the "Memory" key in the menu bar on the left side of the display to enter the message function storage selection interface, with two categories including message function storage and message function call. Message storage includes: Save I, Save II and Save III. Message call includes: Use I, Use II and Use III

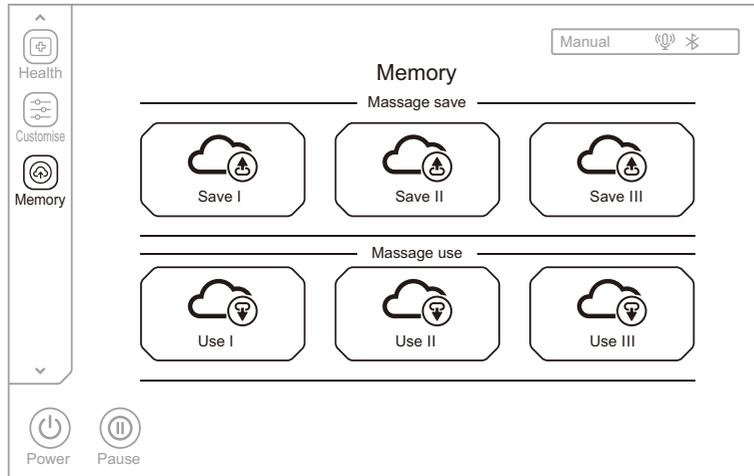


Key	Description
	Storage: Saving the currently running massage program, including automatic program, massage technique, air mode and intensity, position and angle of leg unit and backrest unit, and other massage functions.
	Call: Calling the previously saved massage program, including automatic program, massage technique, air mode and intensity, position and angle of leg unit and backrest unit, and other massage functions.


## Operation Instructions

### X. Other function (Please use this function after power on)

1. In the "Home" interface, click the "Back heat" button to turn on or off the back heating function, and it will warm after 3 minutes of turning on the heating function.

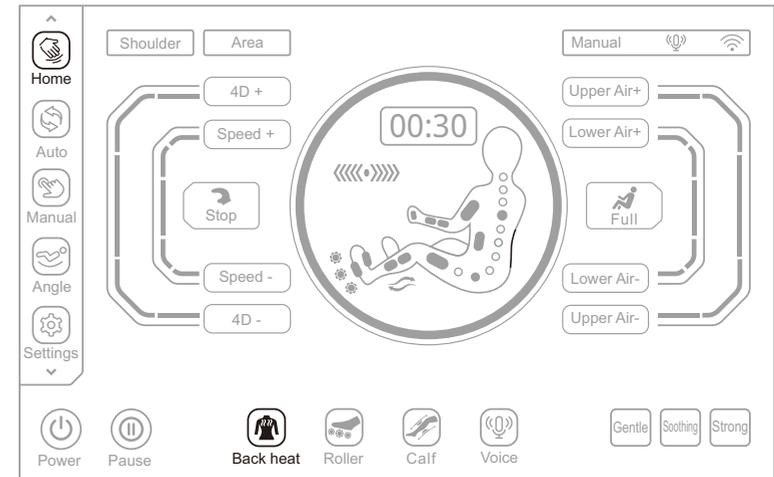


2. In the "Home" interface, click the "Roller" button to turn on or off the foot roller massage function, with three adjustable speeds. Press it for the first time to start Level 1 speed; press it for the second time to start the Level 2 speed; press it for the third time to start the Level 3 speed; and press it for the fourth time to disable the Sole Roller function, which are switched cyclically.

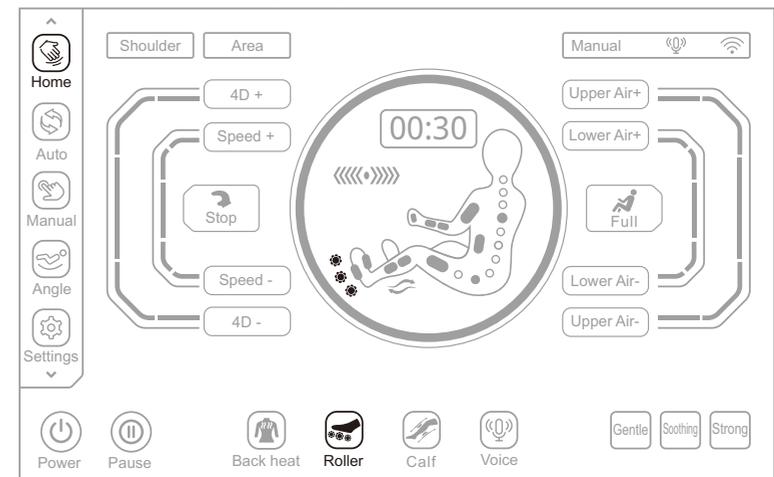


## Operation Instructions

3. In the "Home" interface, click the "Calf" button to turn on or off the calf kneading massage function; there are kneading and airbag squeezing massage functions on the inside and outside of the calf, which can relieve the stiffness or tension of the calf muscles caused by standing for a long time.

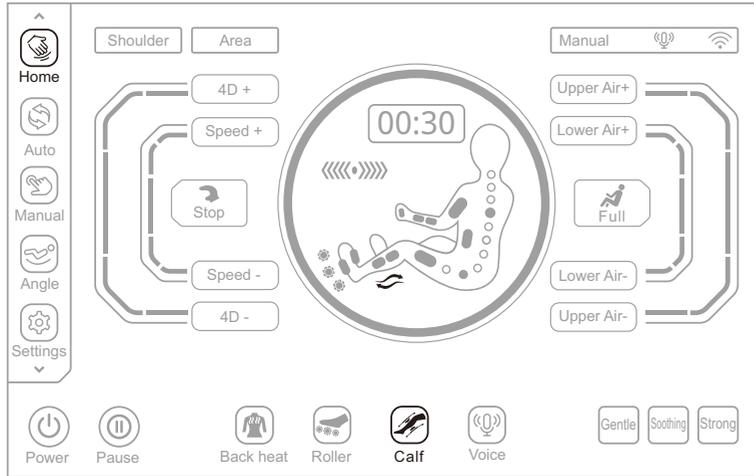


4. In the "Home" interface, click the "Voice" button to wake up the voice assistant. If you press this button and emit a "drip, drip" sound, the voice assistant cannot wake up normally, please go to the setting screen to confirm whether the voice control function is enabled. If the voice control function is not enabled, please turn it on.

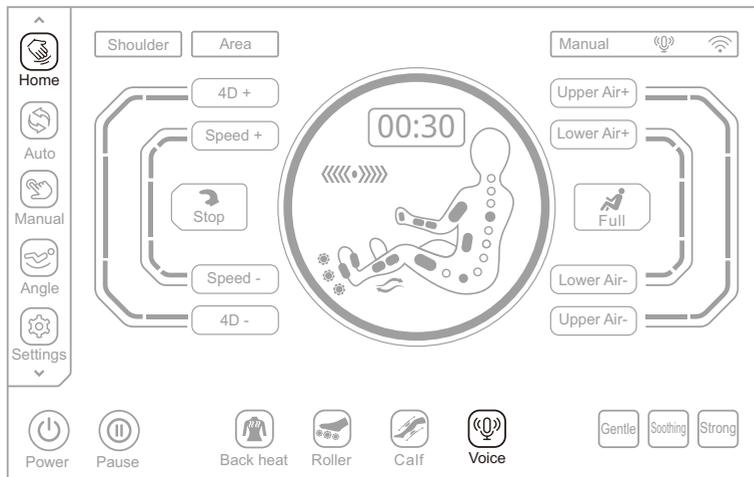


## Operation Instructions

5. In addition to setting in the Custom interface, the function can also be enabled or disabled by selecting the In the "Home" interface, select the "Shoulder Position Adjustment" button, and press the up and down arrow buttons in the pop-up menu to adjust the shoulder position, with a total of 11 adjustable levels.

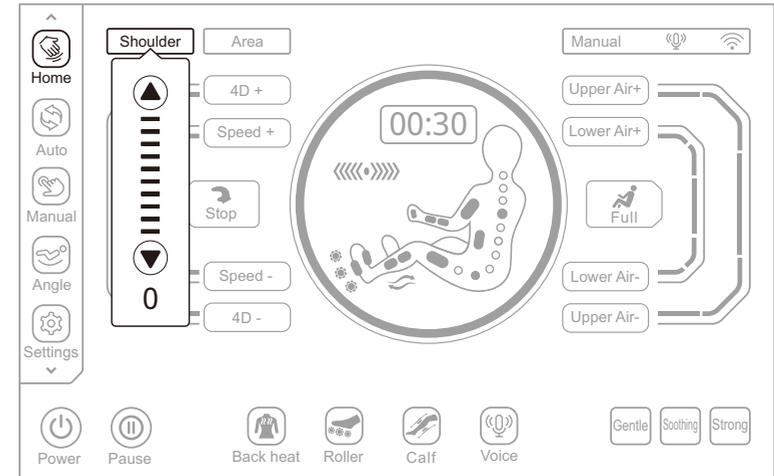


6. In addition to setting in the Custom interface, the function can also be enabled or disabled by selecting the In the "Home" interface, select the "massage time adjustment" button, press the plus and minus arrow head button in the pop-up menu, you can increase or decrease the massage time. Click the "+" key, the time increased by 5 minutes, the maximum increase to 40 minutes. Click the "-" key, the time decreased by 5 minutes.

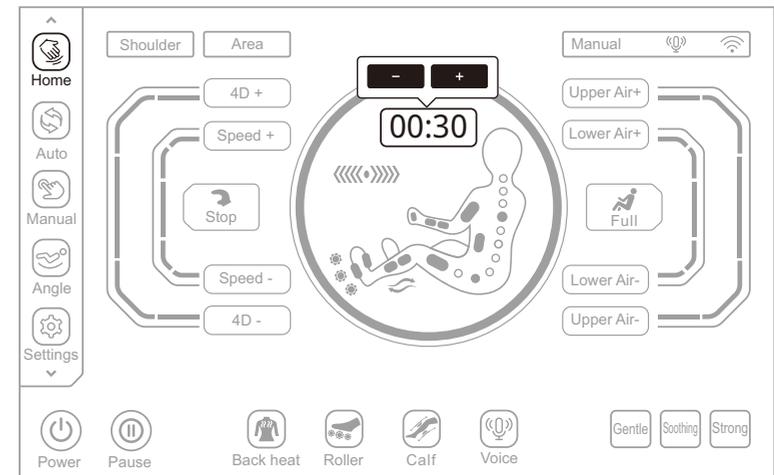

## Operation Instructions

7. In addition to setting in the Custom interface, the function can also be enabled or disabled by selecting the In the "Home" interface, select the "Gentle", "Soothing", "Strong" button to select the appropriate massage intensity.

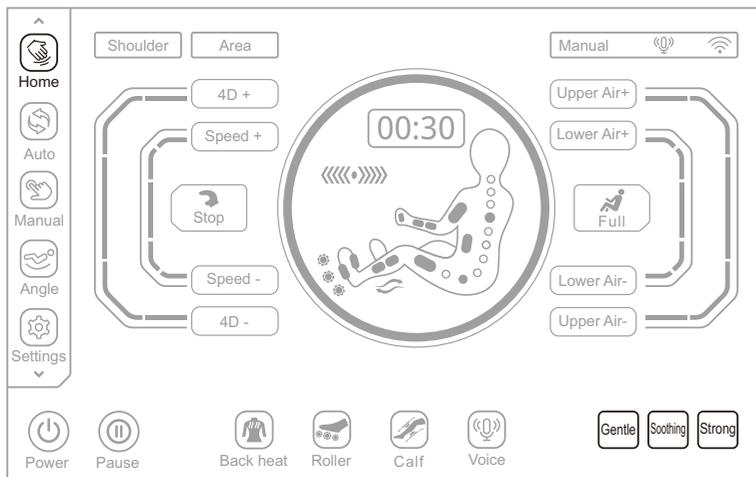

This is the end of massage chair remote controller operation instructions.

## Operation Instructions

### XI. Bluetooth App Download and Install

1. Bluetooth APP download and install:

- (1). Android (Android system) download method: Search "Alfine" in Google Play (Google Store) to download and install the Android version, or scan the QR code below to download and install. After successful installation, you can use the Bluetooth APP to operate the massage chair.
- (2). Apple (iOS system) download method: Search "Alfine" in the App Store (Apple App Store) to download and install the Android version, or scan the QR code below to download and install. After successful installation, you can use the Bluetooth APP to operate the massage chair.



Alfine




2. APP Bluetooth search connection: After the APP is successfully installed, click the "Alfine" icon in the smart device interface. After opening the Alfine APP, it will automatically jump to the Bluetooth connection interface. At the same time, the APP will automatically search for the corresponding device Bluetooth number (such as IMCM -XXXX), then click on the corresponding device Bluetooth number (and displays connected), then the connection is successful. After the connection is successful, you can operate the massage chair through the APP. Note: The Bluetooth function and location information of the smart device system must be turned on before the device is connected.

- (1). At the same time, different languages can also be selected according to the user's message needs. The default language is English and Chinese can be selected.




## Operation Instructions

3.APP Bluetooth name change: If the location of the massage chair is changed or the Bluetooth name is changed, you need to reconnect the device according to the actual situation; after entering the APP interface as shown below, select and click the "Setting" key in the left menu bar, and then select "Device connection" key to connect the device. Note: The Bluetooth function and location information of the smart device system must be turned on before the device is connected.

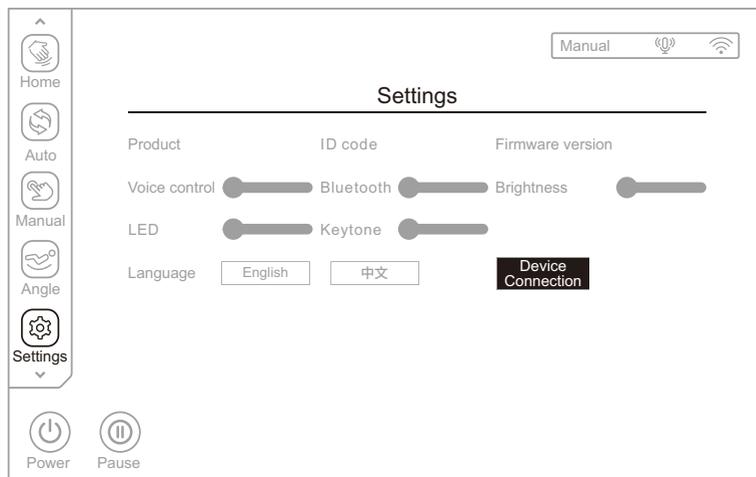


(1).After entering the setting interface as shown below, select and click the "Device connection" key. In the pop-up window interface, the APP will automatically search for the corresponding device Bluetooth number (such as IMCM-XXXX), and then click to select the corresponding device Bluetooth number ( and displays connected), then the connection is successful. After the device is successfully connected, the massage chair can be operated.

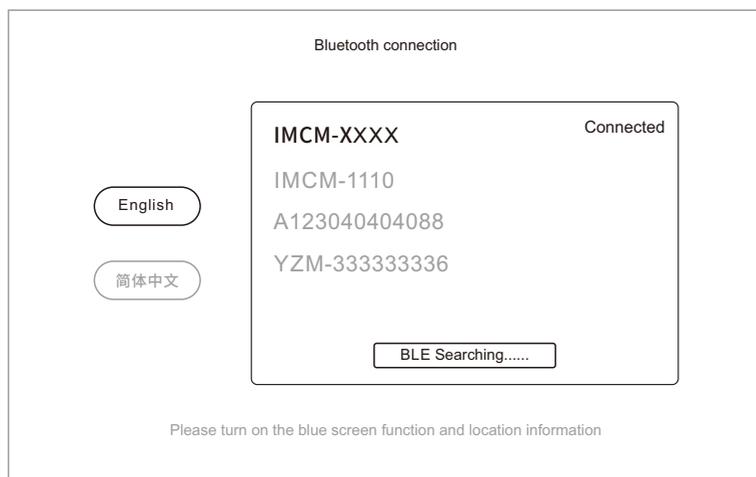


## Operation Instructions

### XII. APP controlled message chair operation instructions

1.After the device is successfully connected, the Bluetooth APP will automatically jump to the standby interface. As shown in the figure below, click the "Switch" key in the menu bar in the lower left corner to turn on the message function.

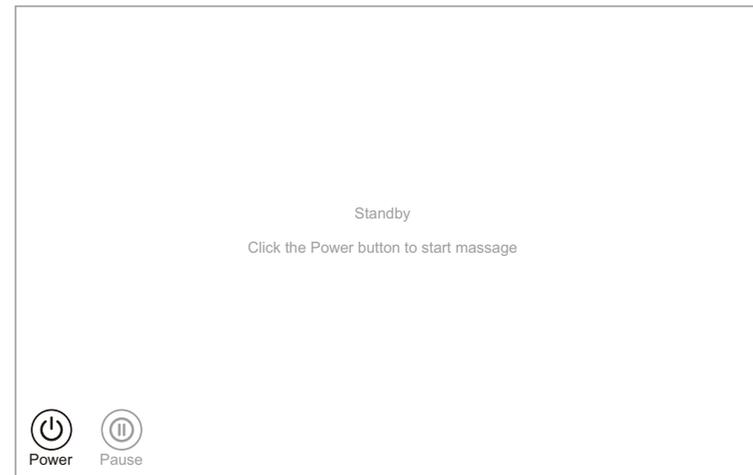

2.After turning it on, you can enter the main interface and select the corresponding message function according to your needs.

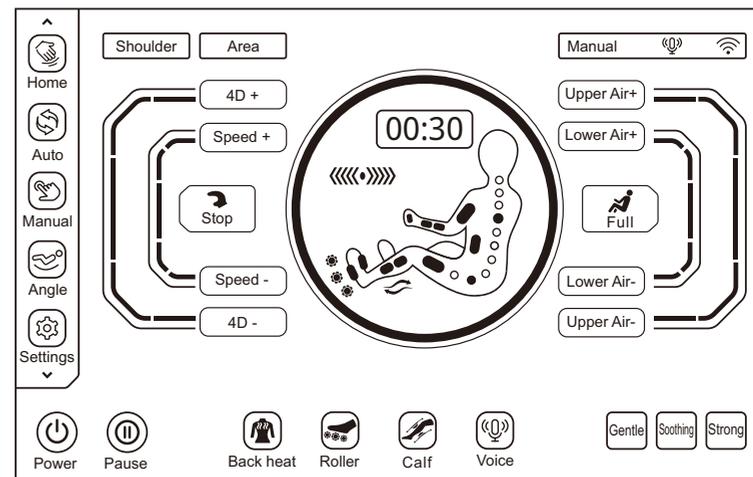


**Caution** For the massage chair Bluetooth APP interface operation method, you can refer to the touch screen remote controller interface operation method of this manual.


## Operation Instructions

### XIII.End massage


During the massage process, press the "Switch  " key on the remote controller or press the "Switch  " key on the armrest to turn it off. You can also press the "Switch  " key on the Bluetooth APP interface to immediately turn off all massage functions and reset the backrest mechanism and leg mechanism, or when the massage time is up, the massage chair will automatically turn off all massage functions and the backrest and leg mechanism will not reset.

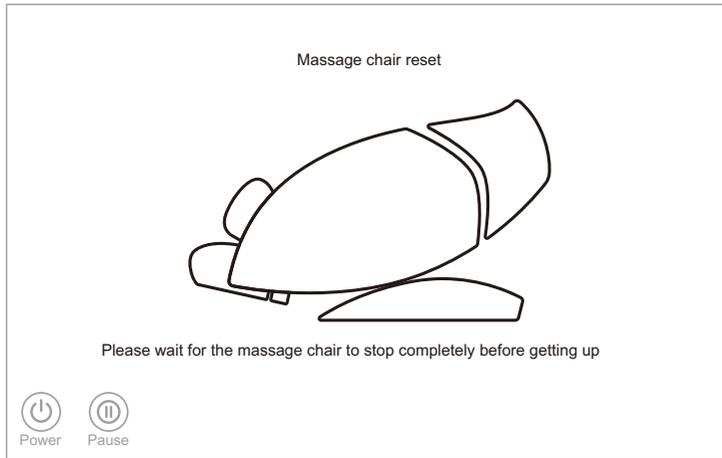

Cut off the whole machine power supply, as shown in the figure (Schematic diagram of power switch position of the whole machine).

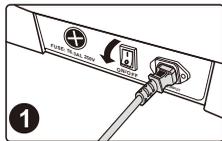

Turn off the power switch ("0" position)

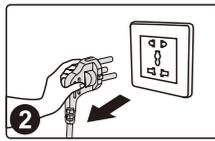

Schematic diagram of pulling out the power plug




Remove the product connection power cord

## Cleaning and Maintenance

### Cleaning synthetic leather and plastic parts

Wipe the leather with a soft, dry cloth.

- Do not use chemicals such as thinner, gasoline, alcohol, etc. to clean the unit.
- When using commercially available leather care products (rags), please follow the instructions for use.
- If synthetic leather is particularly dirty, wipe it in the following way.
  - ① Immerse a soft cloth in water or hot water containing 3% to 5% neutral detergent, then wring it out thoroughly.
  - ② Use the above soft cloth to wipe the leather surface.
  - ③ Wipe off the cleaning solution with a cloth soaked in clean water and thoroughly wrung out.
  - ④ Wipe with a wrung soft cloth.
  - ⑤ Let it air dry naturally.
- When it is difficult to remove stains, please immerse commercially available melamine foam in neutral detergent, and then wipe the machine with it.
- Do not use a hair dryer to dry the surface.
- Be careful when wiping the machine with denim and colored fabrics, as the color of the fabric will stain the surface of the synthetic leather.
- Do not keep these parts in contact with plastic for a long time, as this will cause discoloration.
- Synthetic leather may be discolored, so when using hair dye, please cover the touched part with a towel.

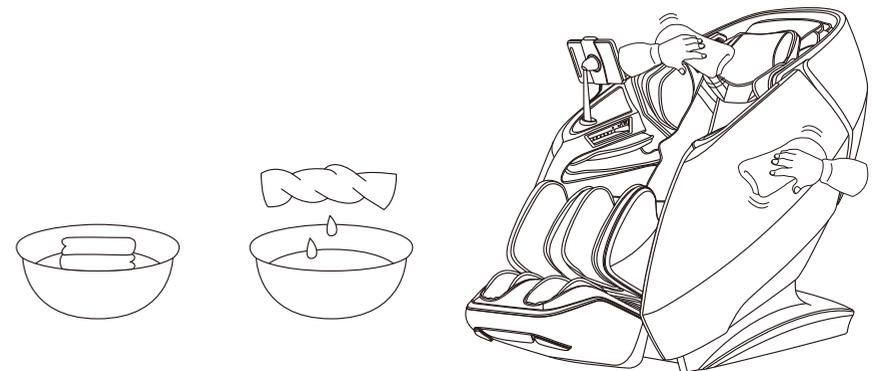

## Troubleshooting

<b>Fault</b>	When the calf mechanism or the backrest reaches a certain position, press the corresponding adjustment button and it will no longer change, and a continuous "beep, beep" sound will be emitted.
<b>Solution</b>	Due to product structure design and ergonomic requirements, this product has a limited protection design for the limit state of attitude adjustment. At the same time, a reminder sound will sound when the limit is reached.
<b>Fault</b>	The function does not work or some functions do not work after the machine is turned on.
<b>Solution</b>	After the machine is turned on by pressing the switch key, it is necessary to manually select an automatic massage program or other working state. If it is not operated, the machine will automatically shut down after 20 minutes. If the manual operation mode is selected, the functions that are not selected may be disabled, and the working mode needs to be manually set in the manual mode.
<b>Fault</b>	The machine makes a leather rubbing sound when adjusting its posture.
<b>Solution</b>	This product adopts high-grade anti-corrosion leather that meets environmental protection requirements. Due to the inherent characteristics of leather materials, there will be a normal slight noise when rubbing at the relative movement, which is a normal phenomenon. Note: If you hear fabric or leather tearing sound when the machine is running, please stop using it immediately and seek professional maintenance.
<b>Fault</b>	The massage wheel did not reach the shoulders or neck.
<b>Solution</b>	If the head does not touch the head cushion or the back does not touch the backrest, the shoulder position may be lower than the actual position during the body shape detection process. Sit in the deepest position of the seat, rest your head on the headrest, and start over from the beginning.
<b>Fault</b>	The unit is damaged. The power cord or power plug is abnormally hot.
<b>Solution</b>	To prevent accidents, be sure to contact an authorized service center.

Please feel free to contact the designated service personnel for any questions or doubts about this product.

## Product specifications

Model: A860

Configure: 10

Name: Massage Chair

Rated voltage: 110-120V~ 60Hz

220-240V~ 50Hz/60Hz

Rated power: 220W

Rated time: 20min

Safety structure: Class I